

ELECTRONIC LETTERING MACHINE

**MAX**

***LM-550A/PC CE • LM-550A/PC C72***  
***LM-550A/PC BS • LM-550A/PC A11***  
***LM-550A/PC (IND)***

---

## **INSTRUCTION MANUAL**

***LETATWIN***



- Prior to use, read this instruction manual.
- Keep this instruction manual.
- It is prohibited to reproduce the contents of this manual without permission.
- The information herein is subject to change without prior notice.




# [The supplementary manual of LM-550A]

## Install a new ribbon to the ribbon case

1. Holding the "Winding core", pull the "Ribbon core" lightly so that the adhered portion comes off.

### REQUEST

- When pulling the "Ribbon core", let the core turn so that the ribbon is not gone slack.

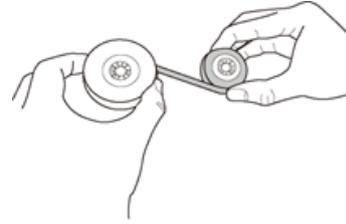


2. While pressing "Button B," set the ribbon core (green or blue) as shown in the figure.

Then, release the "Button B" to lock the ribbon.

### REQUEST

- Do not push too deep or too hard on the Button B.
- Pay attention to the top and bottom of ribbon case.

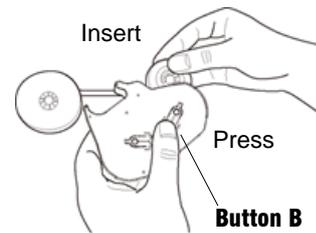


3. While pressing "Button A," set the winding core (black) as shown in the figure.

Then, release "Button A" to lock the ribbon.

### REQUEST

- Do not push too deep or too hard on the Button A.

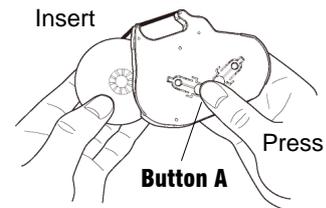

4. Rotate the ink ribbon toward the direction of the arrow until the black surface appears.


(The color changes in the order of transparent → blue → black)

When the surface (black) has appeared, stop rotating.

### REQUEST

- Make sure the ribbon is not slack.

The color changes.

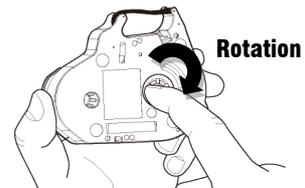


## How to load consumables

1. Open the cassette cover.

Push the lever




2. Push the head release lever (green) until it stops.

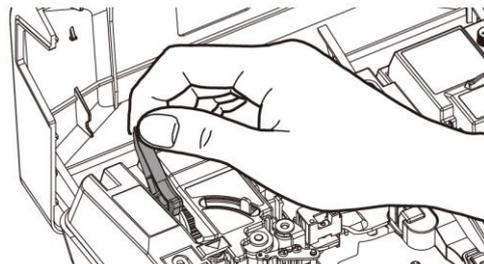


## Tube

- Slide the M roller lever (Silver) to the right until it stops.

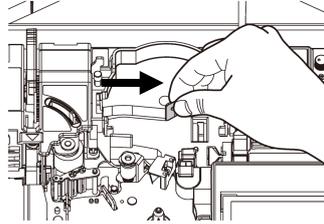


- Load the tube according to the figure below.

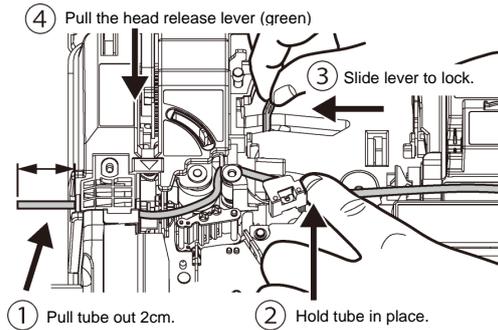

## Note

**Check the curl of the tube and load it in the curl angle shown below.**

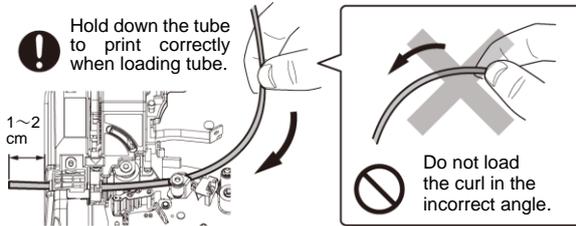

Hold down the tube to print correctly when loading tube.


1~2 cm

- Usable tubes are only from  $\phi 1.5\text{mm}$  to  $\phi 8.0\text{mm}$
- Do not use the tube that has been bent, crushed or badly stained, in order to avoid tube jamming or any other trouble on the machine.
- In case of some generic tubes, the machine cannot print them correctly.


● **To print  $\phi 7.0 - \phi 8.0\text{mm}$  tube, please set the print pressure "L" (low).** (See page 16 2-9 of operation manual.)  
 However, under the low temperature, low print pressure "L" may result in blur print. In such a case, please set it back to "N" (Normal print pressure).

## Tape

- Slide the M roller lever (Silver) to the left until it stops.

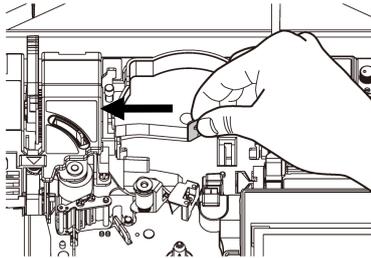


- Load the cassette tape according to the figure below.

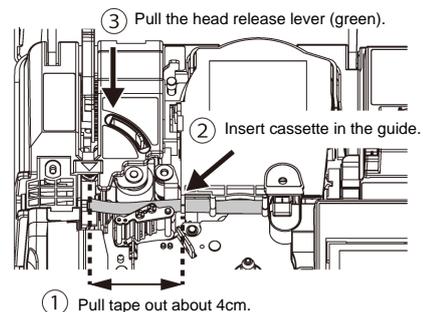


## Ink ribbon

Hold the ink ribbon case as illustrated below and load it completely.

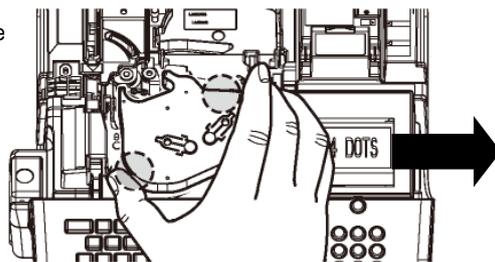

## Proper loading

Press it lightly, to check it is set completely.

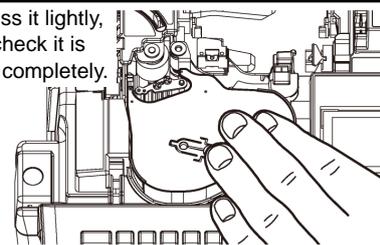

## How to remove the jammed tube

★ If the tube is jammed, do not pull the tube by hand.

Remove the jammed tube with using the "FEED" function.

- Turn off the power. Then, open the cassette cover.
- Remove the ink-ribbon and then, slide the M roller lever (Silver) to unlock.
- While pressing , press  for about 3 seconds. Then, release ON/OFF first, while displaying the logo of "LETATWIN".
- [FEED screen] appears.
- Press  key to rotate the platen (black) roller. The jammed tube can be removed.



# 1. BE SURE TO READ

## 1-1 INTRODUCTION

Thank you for your purchasing MAX TUBE MARKER LM-550E.

This machine is equipped with a variety convenient features that are designed to print on tubes and tapes. Make sure to carefully read the “Precautions for Use” and the instruction manual, in order to use the machine correctly. Since all of the notes shown here are important contents concerning safety, please carefully observe them.

## 1-2 PRECAUTIONS FOR USE

### [Indications]

This operation manual and the machine use various indications in relation to the safe and proper operation of the machine. The indications and their meanings are as follows.

 <b>WARNING</b>	Negligence of this could lead to death or serious injury of an operator.
 <b>CAUTION</b>	Negligence of this could lead to an injury of an operator, damage to your properties, or cause created data be lost.



Describes operation, which may cause a trouble to the instrument and require a repair, or operation, which requires resetting operation, etc. to restore the condition of the instrument.



Describes the points of operation and tips.



Describes a functional precaution.

### [Symbols]



: Denotes “what you should be aware of.”



: Denotes “what you must not do.” An indication in or near this symbol shows a specific prohibition.



: Denotes “what you must do.” An indication in this symbol shows a specific instruction.

 <b>WARNING</b>	
	<ul style="list-style-type: none"> <li>• Never disassemble or modify the machine — it can cause a fire, electric shock, or trouble.</li> <li>• Never modify the AC cord. The modified cord can led to a fire or electric shock.</li> </ul>
	<ul style="list-style-type: none"> <li>• Do not put any foreign substance, such as a finger, a pen, or wire, inside the machine — it can damage the machine or cause a fire or electric shock.</li> <li>• Obtain power directly from an electric outlet. Do not put too much load on one electric outlet — it can cause a fire.</li> <li>• Never put a heavy object on a power cord — the cord can be damaged, leading to a fire or electric shock.</li> <li>• Do not disconnect/reconnect a power plug with a wet hand — you could receive an electric shock.</li> <li>• Take care not to splash water or chemicals over the machine. If any liquid should somehow get inside the machine, disconnect the power plug immediately from the electric outlet, and contact our dealer for repair. If the machine is used in that state, it may cause malfunction, damage, fire or electric shock.</li> <li>• Use only specified AC Adapter appended to the machine.</li> <li>• Never operate the machine with wet hand or with wearing wet clothes – you could receive an electric shock.</li> <li>• Never cover the machine with paper or cloth while the machine is connected to the electric outlet.</li> </ul>
 	<ul style="list-style-type: none"> <li>• Do not use a machine that is out of order. If used in such condition, for example, when emitting smoke or an abnormal sound or peculiar odor, it can cause a fire or electric shock. Disconnect the power plug immediately from the electric outlet, and contact our dealer.</li> <li>• Never use the AC cord with leaving it bundled or winded. This may lead to a fire or damage to the AC cord.</li> <li>• Never use the damaged AC cord. The damaged AC cord may lead to damage to the machine, a fire or electric shock.</li> <li>• When disconnecting the power cord, never hold the AC cord by the cord and make sure to hold it by the plug. Pulling on the cord may lead to damage, which causes fire or electric shock.</li> <li>• Make sure to connect the AC plug to an electric outlet which meets the input specification of the AC adaptor. Mismatch may lead to damage of the machine, a fire or electric shock.</li> <li>• Make sure to clean the power plug periodically. Leaving the connected power plug without clean up may lead to accumulated dusts causing a fire or damage to the machine.</li> </ul>
	<ul style="list-style-type: none"> <li>• Never touch the printer head. Immediately after printing, it is very hot and it may cause burn on the hand and/or the fingers.</li> <li>• Never touch the cutter parts (the blade of Half-cutter and Full cutter) of the instrument. Touching the cutter blades may cause serious injury.</li> </ul>




## CAUTIONS

	<ul style="list-style-type: none"> <li>• Contents saved in the internal memory cannot be permanently saved. Please note that we are not responsible for damages or lost profits resulting from data loss attributable to battery consumption, problems, repairs, etc.</li> </ul>
	<ul style="list-style-type: none"> <li>• Do not share the electric outlet with other equipment (such as air conditioner, refrigerator, microwave, office automation equipment, electrical power tools, etc.) which requires a large electrical capacity — if the voltage drops, then the machine could malfunction.</li> <li>• Never lick the ink ribbon, tubes and tapes.</li> <li>• Make sure to place the machine on the stable and horizontal work table. Avoid unstable or inclined place. It may lead to an injury or damage to the machine.</li> <li>• Do not touch the power inlet. It may lead to damage of the printer by electrostatic.</li> </ul>
	<ul style="list-style-type: none"> <li>• When the machine will not be used for a long time period, disconnect the power plug from the electric outlet, for safety.</li> <li>• Prior to moving the machine to another place, make sure to disconnect the power plug. Moving the machine to another place with leaving the power plug connected may lead to damage of the power plug or the AC cord, which may result in a fire or electric shock.</li> </ul>
	<ul style="list-style-type: none"> <li>• When replacing the half cutter, make sure to turn off the power beforehand. Otherwise, the machine may unexpectedly operate and lead to an injury.</li> </ul>

**REQUEST**


In order to prevent problems with the machine, follow the precautions below.

1. This machine and AC adopter are precision products. Handle them carefully, do not drop them and do prevent them from any shock or impact.

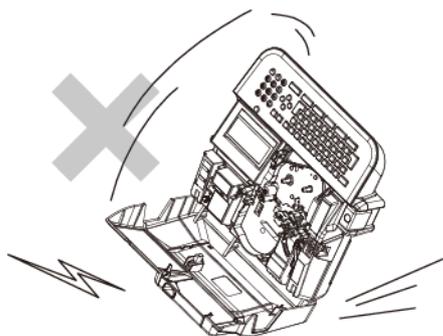


2. For the consumables other than the tubes (tape cassette, ink ribbon case, cutter, etc), use the designated products only. Never use other products.


3. When printing characters on the tubes, do not use the tubes that has been bent, crushed or badly stained. Especially, hard dirt or foreign material attached to the tubes may cause trouble of the printer head.

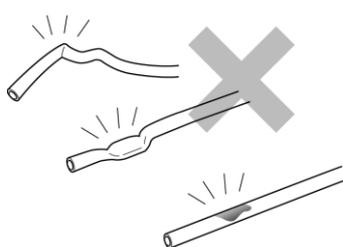

4. Do not clog the exit of the tapes and tubes. Do not insert things in it. Do not pull the tapes or tubes when it is being printed.

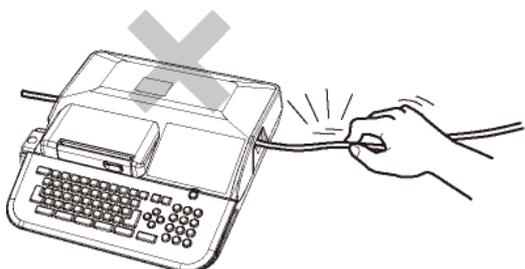

5. Do not lift up the machine holding its cassette cover. The machine may fall.

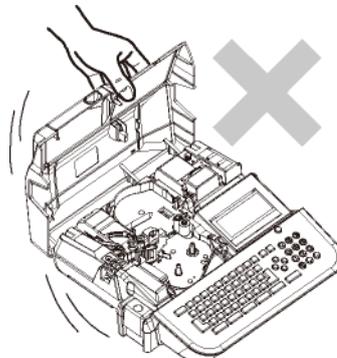


6. If there is strong external noise or shock applied to the machine during operation, abnormal displays may appear or contents of the memory may be erased.

7. Do not pull out the power cord while the power key of the main body is turned on or right after it is turned off, which may cause malfunction or trouble such as loss of contents of the setting or memory.


8. If tube is jammed, do not pull the tube by hand. Remove the jammed tube with using the "FEED" function. (page 15)

9. Do not place any heavy materials on the machine or power cord.

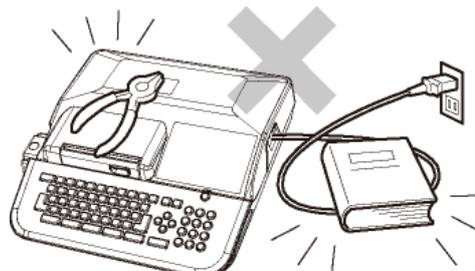

10. Do not press hard the display, which may cause fracture of the display.


11. Do not spill liquid such as coffee, juice, water on the machine.

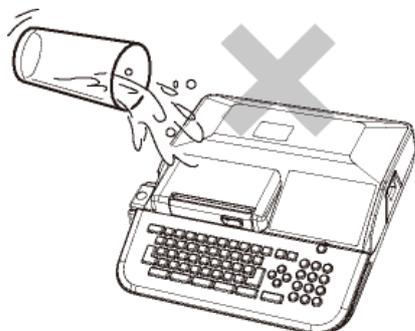

12. To clean dirt of the machine, use a soft cloth and wipe it off. When doing it, do not use organic solvents or chemicals such as thinner, benzene or alcohol, which may cause deformation or discoloration of the machine.

13. If you bring the machine from the cold outside into a warm room, there may be dew condensed within the machine due to the rapid change of the temperature. In this case, leave the machine in the room for more than 30 minutes and use it after confirming that the dew has disappeared.

14. To avoid the cause of trouble, do not use or store the machine in the following places.

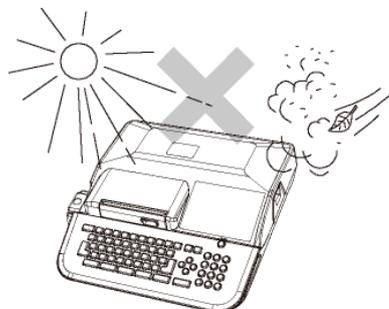

- (1) Under the direct sun light or the place near a thermal source such as a heater.
- (2) There is a lot of dust or humidity.
- (3) Do not use the machine in the place where the temperature becomes lower than 15°C or higher than 35°C.
- (4) Do not store the machine in the place where the temperature becomes lower than 0°C or higher than 40°C.

15. To store or transport the machine, use the attached carrying case or package supplied to you when you bought the machine.

16. Intended for use in a residential area or its adjacent area, this apparatus is provided with an electromagnetic interference preventive measure.

If it is used near a radio or TV set, however, it may cause reception interference.

### 1-3 CONTENTS

The supplementary manual of LM-550A.....	1
1. BE SURE TO READ.....	3
1-1 INTRODUCTION.....	3
1-2 PRECAUTIONS FOR USE .....	3
1-3 CONTENTS .....	8
2. BEFORE USE .....	10
2-1 MAIN FEATURES .....	10
2-2 CONFIRMING THE PACKAGE CONTENTS .....	11
2-3 NAME OF EACH SECTION.....	12
2-4 NAME OF KEYS AND THEIR FUNCTIONS .....	13
2-5 INPUT SCREEN .....	15
2-6 SELECTING THE SCREEN LANGUAGE .....	16
2-7 CLEANING THE PLATEN ROLLER OR REMOVING JAMMED TUBE (“FEED” function).....	17
2-8 ADJUSTING THE HALF CUTTING DEPTH .....	18
3. LOADING THE CONSUMABLES.....	19
3-1 INSTALLING OR REPLACING THE INK RIBBON.....	19
3-2 LOADING THE TUBES AND THE INK RIBBON CASE .....	21
3-3 LOADING THE TAPE CASSETTE AND THE INK RIBBON CASE .....	25
3-4 REPLACING THE HALF CUTTER.....	27
4. BASIC OPERATION.....	28
4-1 PRINTING ON THE TUBE (PITCH PRINT) .....	29
4-2 PRINTING ON THE TAPE .....	31
4-2-1 PITCH PRINT ON THE TAPE .....	31
4-2-2 NORMAL PRINT ON THE TAPE.....	33
5. INPUTTING AND DELETING CHARACTERS .....	35
5-1 INPUTTING CHARACTERS .....	35
5-2 DELETING CHARACTERS .....	35
5-3 INPUTTING CHARACTERS WITH “CODE” FUNCTION.....	36
5-4 INPUTTING CHARACTERS WITH “DIACR” FUNCTION .....	37
6. FUNCTIONS .....	38
6-1 SIZE.....	38
6-2 WIDTH.....	39
6-3 CHARACTER / LINE SPACE .....	40
6-4 PITCH PRINT .....	41
6-4-1 PITCH LENGTH.....	42
6-4-2 PITCH CUT.....	44
6-5 NORMAL PRINT.....	44
6-5-1 PRINTING LENGTH .....	44
6-5-2 MARGIN.....	44
6-6 VERTICAL .....	45

---

6-7	REPEAT .....	45
6-8	SEQUENCE .....	46
6-9	FRAME .....	47
6-10	SYMBOL .....	48
6-11	REGISTRATION OF WORD .....	49
6-12	IMAGE .....	51
6-13	OPTION .....	51
6-13-1	PRINTING DENSITY .....	52
6-13-2	LOW TEMP. MODE .....	52
6-13-3	FEED THE HEAD OF TUBE .....	52
6-13-4	“6, 9” MARK .....	53
6-13-5	POSITION OF PRINTING LINE .....	53
6-13-6	CUTTING POSITION .....	53
6-13-7	AUTO POWER-OFF .....	54
6-13-8	DEFAULT VALUE OF “PITCH LENGTH” .....	54
6-13-9	DEFAULT VALUE OF “REPEAT” .....	54
6-13-10	JUSTIFICATION .....	55
6-13-11	PRINTING STYLE OF “RPT” & “SEQ” .....	55
6-13-12	LCD BRIGHTNESS .....	56
6-13-13	LCD BACKLIGHT .....	56
6-14	COPY / PASTE .....	57
6-14-1	COPY .....	57
6-14-2	PASTE .....	57
6-15	MEMORY .....	57
6-15-1	INTERNAL MEMORY .....	59
7.	PRINTING .....	60
7-1	PRINT RANGE SETTING SCREEN .....	60
7-2	PRINTING LENGTH ALIGNMENT .....	60
7-3	CONTINUE PRINTING AFTER THE CONSUMABLES RUNNING OUT .....	61
8	TROUBLE SHOOTING .....	62
8-1	ERROR MESSAGE LIST .....	62
8-2	TROUBLESHOOTING .....	65
9	PRODUCT SPECIFICATIONS .....	67
10	APPENDICES .....	68

## 2. BEFORE USE

### 2-1 MAIN FEATURES

- With simple operation, you can print characters directly on tubes and tapes.
- High-speed printing (up to 27.5mm/s) and high durability.
- Bright and large backlit LCD.
- The internal memory of 61,250 characters.
- Usable tubes and tapes are as follows:
  - Max genuine tubes =  $\phi$ 3.2mm,  $\phi$ 3.6mm,  $\phi$ 4.2mm,  $\phi$ 5.2mm,  $\phi$ 6.4mm
  - Generic tubes =  $\phi$ 2.5mm,  $\phi$ 3.2mm,  $\phi$ 3.6mm,  $\phi$ 4.2mm,  $\phi$ 5.2mm,  $\phi$ 5.5mm,  $\phi$ 6.0mm,  $\phi$ 6.5mm
  - Shrinkable tubes =  $\phi$ 2.5mm,  $\phi$ 3.2mm,  $\phi$ 3.6mm,  $\phi$ 4.2mm,  $\phi$ 5.2mm,  $\phi$ 5.5mm,  $\phi$ 6.0mm,  $\phi$ 6.5mm
  - Non PVC tubes =  $\phi$ 3.2mm,  $\phi$ 3.6mm,  $\phi$ 4.2mm,  $\phi$ 5.2mm
  - Max genuine tapes = width: 5mm, 9mm, 12mm
- Half cutting allows you to carry the tubes without losing and to remove tapes with ease.
- Ten key allows you to input data quickly and easily.
- Key top prints are protected with overcoat.
- Multiple screen languages can be selected.
- Adjustable half cutting depth with Depth adjustment lever.

## 2-2 CONFIRMING THE PACKAGE CONTENTS


This machine comes with the following accessories.  
Confirm that they are included before using the machine.




Main Unit




Ribbon case

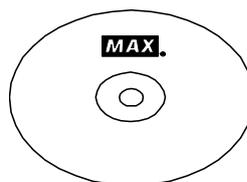

Instruction manual  
(CD-ROM)


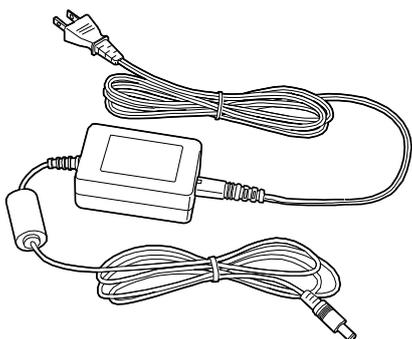


AC adapter

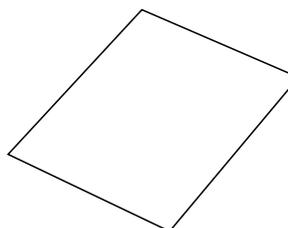


Supplementary manual


2-3 NAME OF EACH SECTION

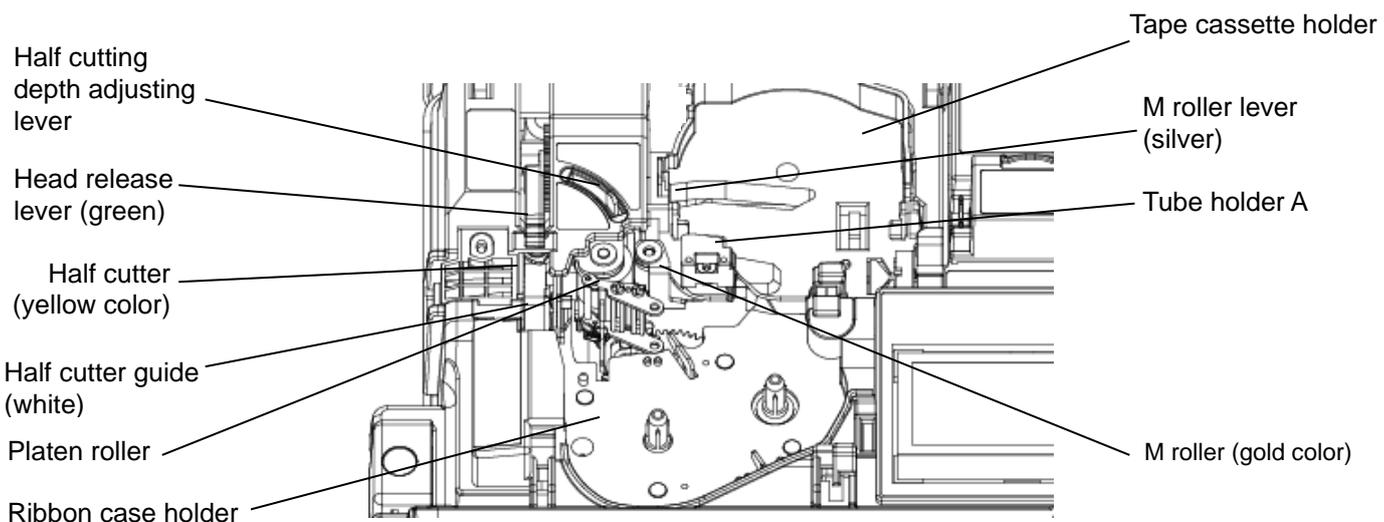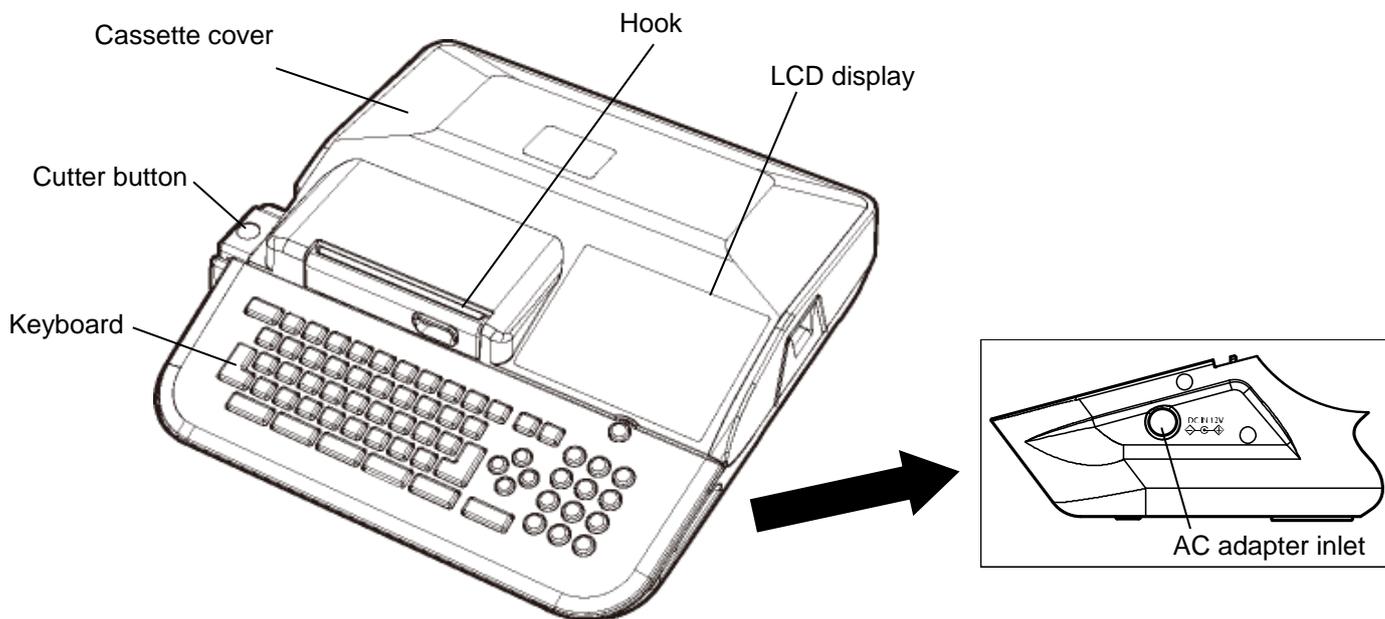


- Tape cassette

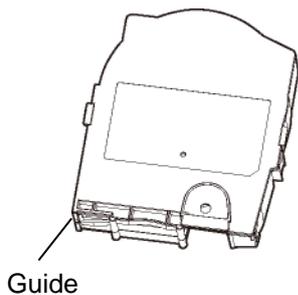

- Ribbon case

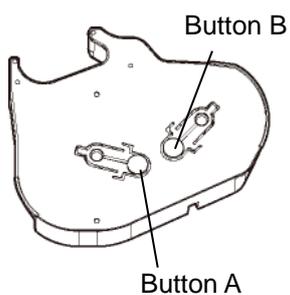


- Winding core

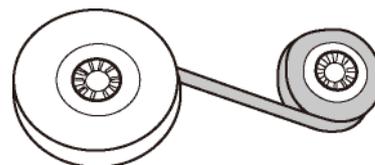

- Ribbon core

## 2-4 NAME OF KEYS AND THEIR FUNCTIONS

### <1> Keyboard layout

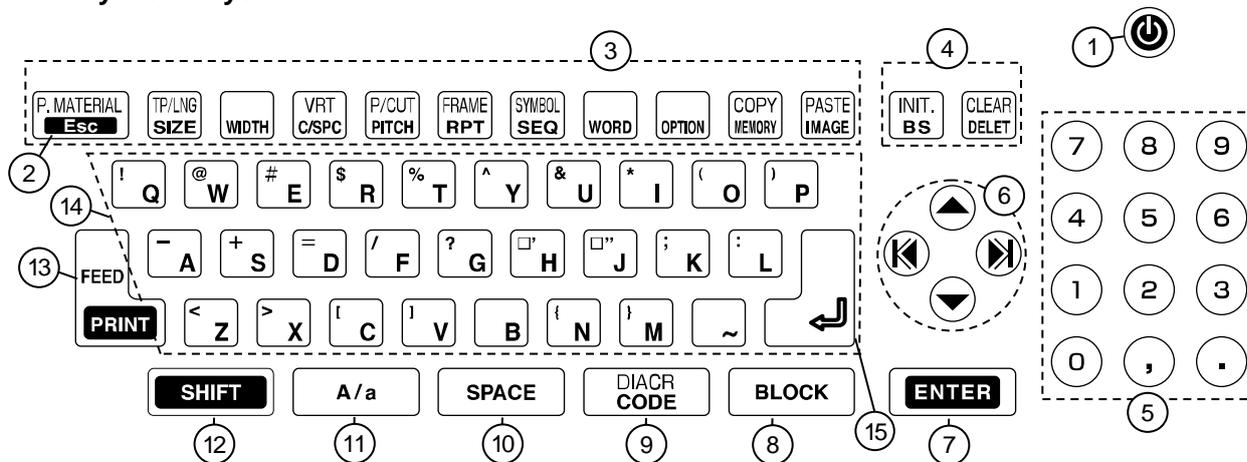


### <2> Keys and their functions

1	ON/OFF	Press this key to turn ON/OFF power.
2	ESC	Press this key to return to the previous menu and not to make any changes. When printing or displaying an "IMAGE," cancel the operation.
3	P.MATERIAL (SHIFT → Esc)	Press these key to set the "PRINTED MATERIAL" when changing material without turning off power. (See 4: BASIC OPERATION)
	SIZE	Press this key to set the "SIZE" of characters. (See 6-1: SIZE)
	TP/LNG (SHIFT → SIZE)	Press these keys to set the "PRINTING LENGTH" and the "MARGIN" for the [NORMAL PRINT MODE]. (See 6-5: NORMAL PRINT)
	WIDTH	Press this key to set the "WIDTH" of characters. (See 6-2: WIDTH)
	C /SPC	Press this key to set the "CHARACTER SPACE" and " LINE SPACE." (See 6-3: CHARACTER / LINE SPACE)
	VRT (SHIFT → C/SPC)	Press these keys to set the "VERTICAL PRINTING." (See 6-6: VERTICAL)
	PITCH	Press this key to set the "PITCH LENGTH." (See 6-4: PITCH PRINT)
	P /CUT (SHIFT → PITCH)	Press these keys to set the way of "PITCH CUTTING." (See 6-4: PITCH PRINT)
	RPT	Press this key to set the repeating times. (See 6-7: REPEAT)
	FRAME (SHIFT → RPT)	Press these keys to set the "FRAME." (See 6-9: FRAME)
	SEQ	Press this key to set the sequential numbers. (See 6-8: SEQUENCE)
	SYMBOL (SHIFT → SEQ)	Press this key to operate the "SYMBOL" function. (See 6-10: SYMBOL)
WORD	Press these keys to operate the "MEMORY OF WORD" function. (See 6-11: REGISTRATION OF WORD)	

3	<b>OPTION</b>	Press this key to enter “ <b>OPTION</b> ”.
	<b>MEMORY</b>	Press this key to operate the “ <b>MEMORY</b> ” function. <b>(See 6-15-1: INTERNAL MEMORY)</b>
	<b>COPY</b> ( <b>SHIFT</b> → <b>MEMORY</b> )	Press these keys to copy the block indicated by the cursor. <b>(See 6-14-1: COPY)</b>
	<b>IMAGE</b>	Press these keys to display the printing image. <b>(See 6-12: IMAGE)</b>
	<b>PASTE</b> ( <b>SHIFT</b> → <b>IMAGE</b> )	Press these keys to pastes the copied block to the cursor position. <b>(See 6-14-2: PASTE)</b>
4	<b>BS</b>	Press this key to delete the character just before the cursor.
	<b>INIT.</b> ( <b>SHIFT</b> → <b>BS</b> )	Press these keys to Initialize all of the setting data. If any document is remaining in the [ <b>INPUT screen</b> ], it is unable to initialize. After deleting the entire document (press <b>SHIFT</b> → <b>DELET</b> ), execute the initialization.
	<b>DELET</b>	Press this key to delete the character on the cursor. Press this key to initialize user default or factory default value under the function keys menu.
	<b>CLEAR</b> ( <b>SHIFT</b> → <b>DELET</b> )	Press these keys to delete the entire documents on the [ <b>INPUT screen</b> ].
5	Ten key	Press this key to input numbers, comma and period.
6	<b>▲/▼/◀/▶</b>	Press these keys to move the cursor on the [ <b>INPUT screen</b> ] or change the setting items under the function keys menu.
	<b>SHIFT</b> → <b>▶</b> or <b>SHIFT</b> → <b>◀</b>	Press these keys to move the cursor to the top or the end of the document.
7	<b>ENTER</b>	Press this key to determine the setting value on the [ <b>INPUT screen</b> ].
8	<b>BLOCK</b>	Press this key to insert a new “ <b>BLOCK</b> ” just before the cursor.
9	<b>CODE</b>	Press this key to input the code number to insert symbols. <b>(See 5-3: INPUTTING CODE)</b> ● When “ <b>Chinese</b> ” as the screen language is selected, press this key to allow you to input the Chinese character by using GB or Big 5 code.
	<b>DIACR</b> ( <b>SHIFT</b> → <b>CODE</b> )	Press these keys to input diacritics for European languages. <b>(See 5-4: INPUTTING DIACR)</b>
10	<b>SPACE</b>	Press this key to input a space.
11	<b>A/a</b>	Press this key to switch capital letters to small letters, or vice versa.
12	<b>SHIFT</b>	Press this key to access secondary characters on the key or the secondary functions of group (3), (4), (9) and (13).
13	<b>PRINT</b>	Press this key to move to the “ <b>PRINT</b> ” function.
	<b>FEED</b> ( <b>SHIFT</b> → <b>PRINT</b> )	Press these keys to feed tubes or tapes.
14	Character keys	Press these keys to input characters.
15		Press this key to change lines.

## 2-5 INPUT SCREEN

### Screen layout

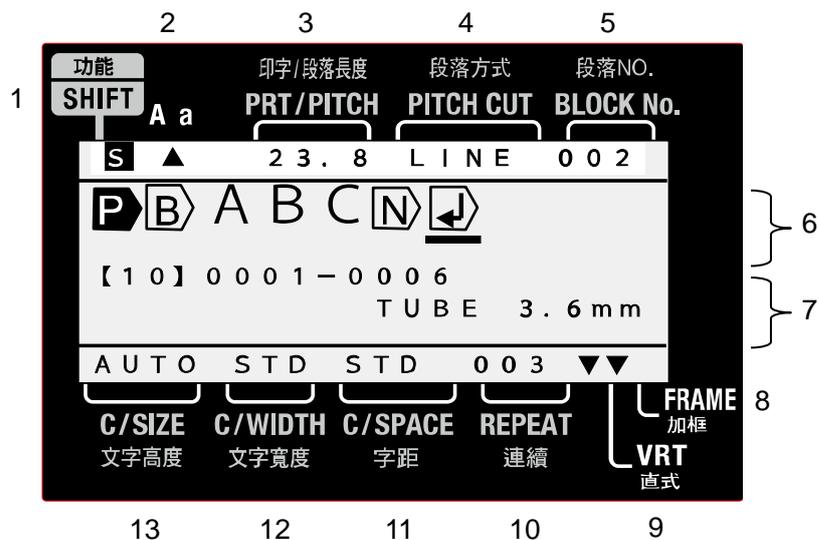

1	SHIFT	Displays  when “SHIFT” is pressed, and it goes off when “SHIFT” is pressed again.
2	A ,a	“A” is turned on. : Enables inputting capital letters “a” is turned on. :Enables inputting small letters.
3	PRT/PITCH	In [PITCH PRINT MODE], display the “PITCH LENGTH.” (See 6-4: PITCH PRINT) In [NORMAL PRINT MODE], displays the “PRINT LENGTH.” (See 6-5: NORMAL PRINT)
4	PITCH CUT	Displays the way of the “PITCH CUTTING.” (See 6-4-2: PITCH CUT)
5	BLOCK No.	Displays the “BLOCK NO.” on the cursor.
6	INPUT screen	Displays the characters entered and the edit marks.
7	STATUS screen	The upper field displays the status of the sequential number if it has been set. The lower field displays the printed material.
8	FRAME	Displays when the framing is “ON.” (See 6-9: FRAME)
9	VRT	Displays when the vertical printing is selected. (See 6-6: VERTICAL)
10	REPEAT	Displays the repeating numbers of the block on the cursor. (See 6-7: REPEAT)
11	C/SPACE	Displays character space. (See 6-3: CHARACTER LINE/SPACE)
12	C/WIDTH	Displays the character. (See 6-2: WIDTH)
13	C/SIZE	Displays the character size of the block on the cursor. (See 6-1: SIZE)

The meanings of edit symbols displayed on the screen are as follows.


- (1)  : Represents the [PITCH PRINT MODE] activated. Represents a group of blocks with same pitch length until next [P] symbol. **(See 6-4: PITCH PRINT)**
- (2)  : Represents the block. Up to 200 blocks can be input in an entire document.  
**(See 6-4: PITCH PRINT)**
- (3)  : Represents the line feed.  
(Printing on tubes)  $\phi$ 2.5 to  $\phi$ 3.6 : Only 1 line can be set.  
 $\phi$ 4.2 to  $\phi$ 6.5 : Up to 2 lines can be set, provided 2mm character size is used. (for  $\phi$ 4.2 tubes, the line space must be set to CNT (contact.)  
(Printing on tapes) Up to 3 lines can be set, provided 12mm tape and 2mm character size are used.
- (4)  : Represents the SEQUENCE is set. **(See 6-8: SEQUENCE)**

## 2-6 SELECTING THE SCREEN LANGUAGE

Multiple screen languages can be selected, according to the model type of your machine.

Model type	Language
LM-550E A11-T	English or Chinese(T) (Traditional Chinese Character)
LM-550E A12-C	English or Chinese(C) (Simplified Chinese Character)
LM-550E K	LM-550E K Korean
LM-550E IND	English or Chinese(C) (Simplified Chinese Character)
LM-550E C72	English or Chinese(C) (Simplified Chinese Character)

### [HOW TO SELECT]

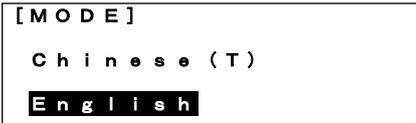- Turn the power on, while pressing  and  at the same time.  
The [LANGUAGE MODE screen] appears after displaying the LETATWIN logotype.  
[LANGUAGE MODE screen] 
- Select the language by using  $\blacktriangle$ / $\blacktriangledown$  key. And then press , the power supply automatically turns off.
- Turn the power on again, then it starts up with the language selected.

**Note:** • When selecting English, you can neither input nor print Chinese characters.


## 2-7 CLEANING THE PLATEN ROLLER OR REMOVING JAMMED TUBE (“FEED” function)

1. Open the cassette cover.
2. While pressing **[C]**, press **[ON/OFF]** for about 3 seconds.  
Then, release **[ON/OFF]** first while displaying the logo of “LETATWIN.”



3. **[FEED screen]** appears.



4. Slide the switching lever to the right until it stops, as shown in the figure.

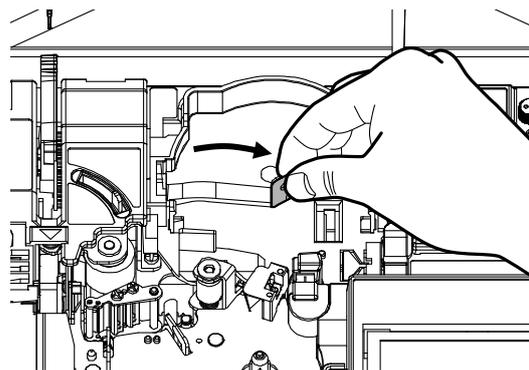

5. Put wet cloth with water or alcohol to the platen roller and clean it using **◀/▶** key.

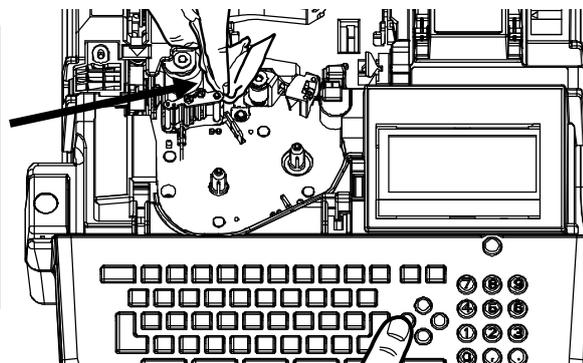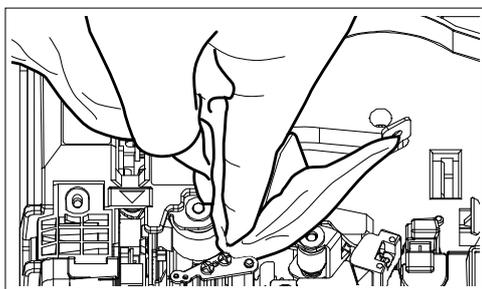


**Note:** If the tube is jammed, remove the consumables using this “FEED” function. Do not pull the tube by hand.

## 2-8 ADJUSTING THE HALF CUTTING DEPTH

Half cutting depth can be adjusted with the "Half cutting depth adjustment lever", when half cutting depth is not adequate.

**Note:**

- When printing on tubes, the lever has to be positioned on the "TUBE."
- When printing on tape, the lever has to be positioned on the "TAPE."

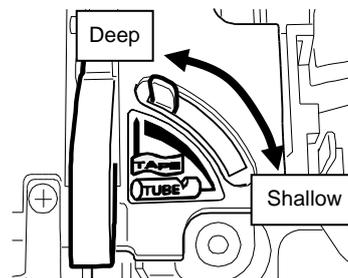



### 3. LOADING THE CONSUMABLES

Follow the steps bellow.

- (1) Installing the ink ribbon to the ink ribbon case.
- (2) Loading the tube or tape.
- (3) Loading the ink ribbon case.

#### 3-1 INSTALLING OR REPLACING THE INK RIBBON

Name of each section

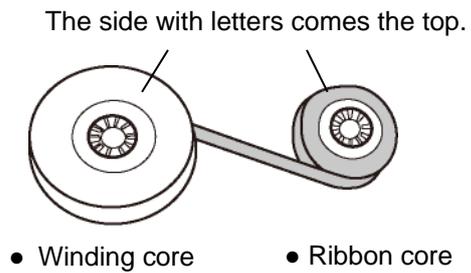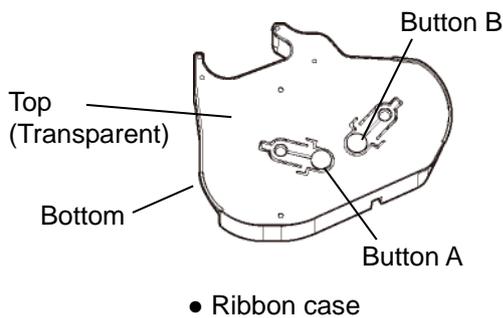


**Note:** Use a ribbon case LM-RC500 for LM-550E

Ribbon case LM-RC300 cannot be used for LM-550E.

Also, ink ribbon LM-IR50B/LM-IR50W/LM-IR50BP cannot be set in ribbon case LM-RC300.

#### 1. Install a new ribbon to the ribbon case.


1. Holding the “Winding core”, pull the “Ribbon core” lightly so that the adhered portion comes off.

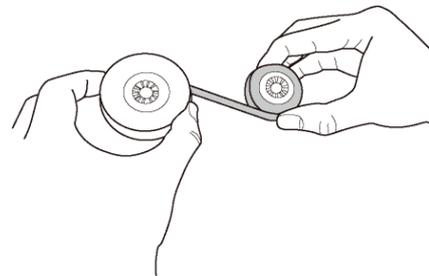

#### REQUEST

- When pulling the “Ribbon core”, let the core turn so that the ribbon is not gone slack.

2. While pressing “**Button B**,” set the ribbon core as shown in the figure. Then, release the “**Button B**” to lock the ribbon.

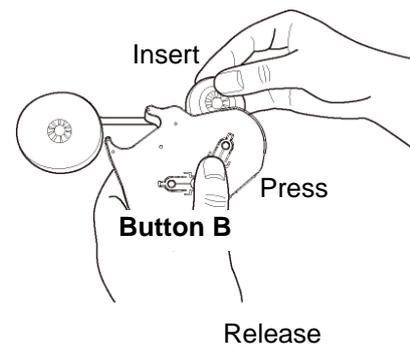


#### REQUEST

- Pay attention to the top and bottom of the ribbon case.


### 3. LOADING THE CONSUMABLES

---

3. While pressing "**Button A**," set the winding core as shown in the figure. Then, release "**Button A**" to lock the ribbon.

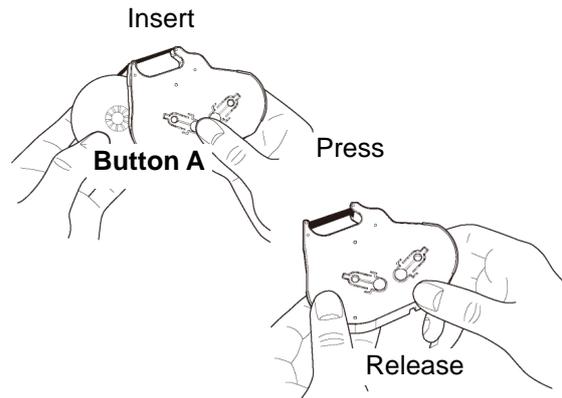


4. Rotate the ink ribbon toward the direction of the arrow until the black surface appears. (The color changes in the order of transparent → blue → black)  
When the surface (black) has appeared, stop rotating.

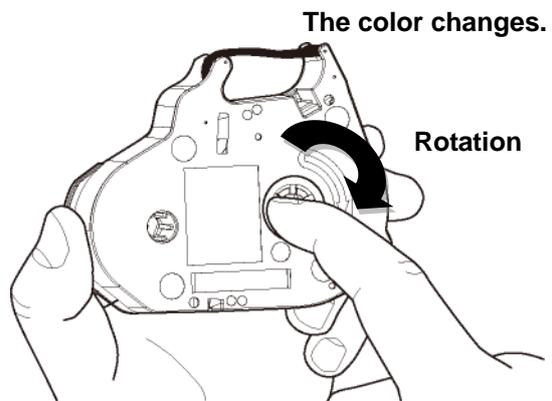


### 2. Replacing the ink ribbon, first remove the ink ribbon from the ribbon case.

1. While pressing "**Button B**," take out the ribbon core from the ribbon case.

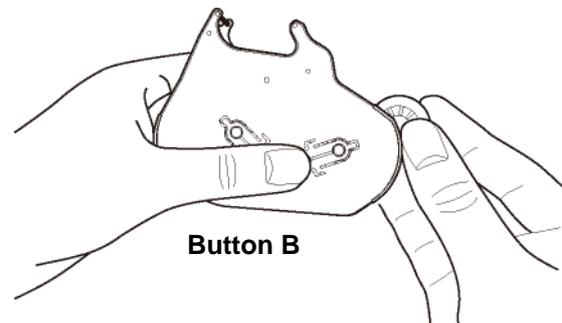


2. Next, while pressing "**Button A**," take out the winding core from the ribbon case.

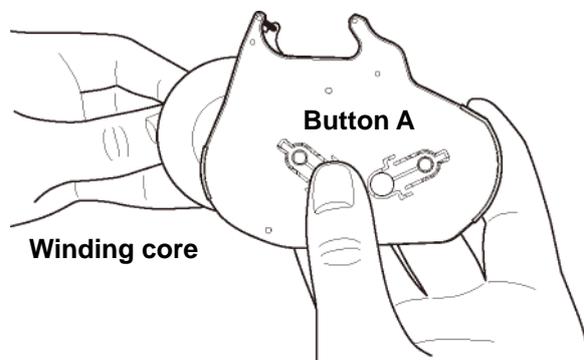


### 3-2 LOADING THE TUBES AND THE INK RIBBON CASE

1. Open the cassette cover.
2. Push the head release lever behind.



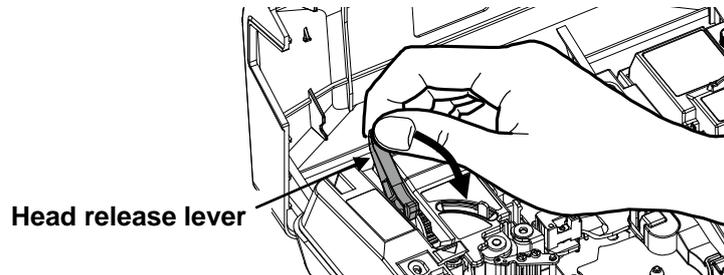


3. Slide the switching lever to the right until it stops.

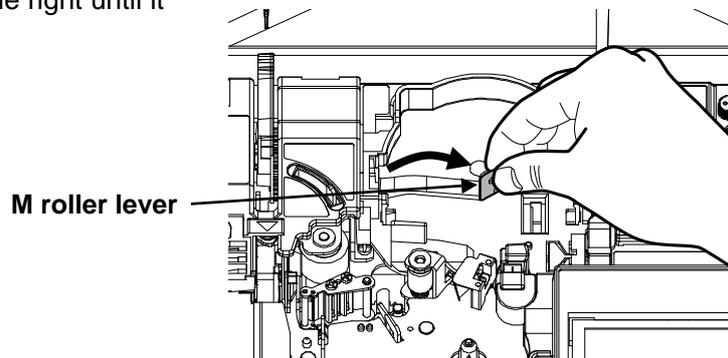


### 3. LOADING THE CONSUMABLES

4. a: Pass the tubes under the holding plate.
- b: Extrude the tip of the tubes by 1~2cm from the machine.

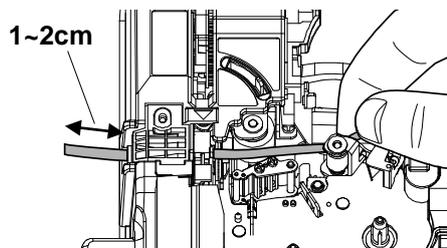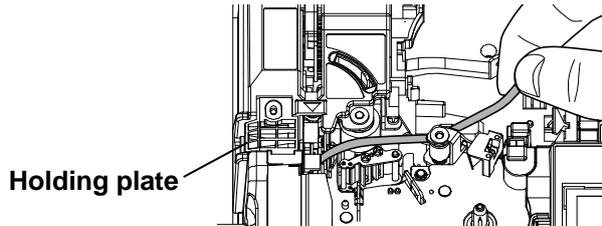
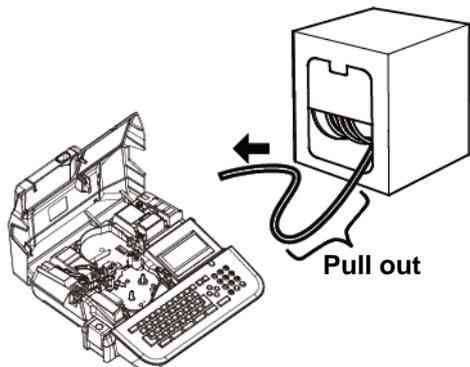


5. Place and hold the tube on the "TUBE" label and slide the "Switching lever" to lock.

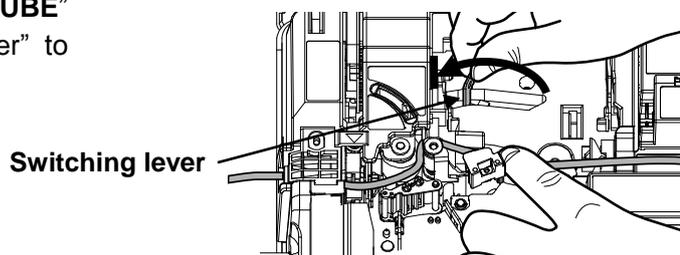


**The tube has been loaded.**

Make sure the tube is loaded as illustrated bellow.

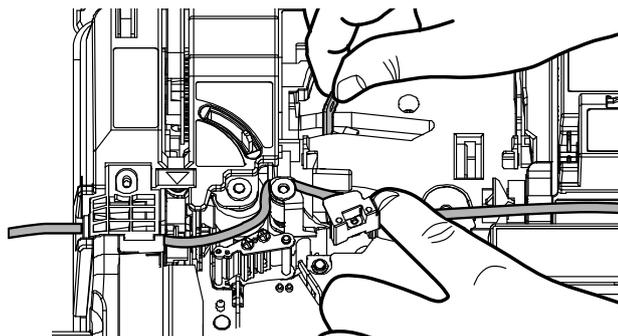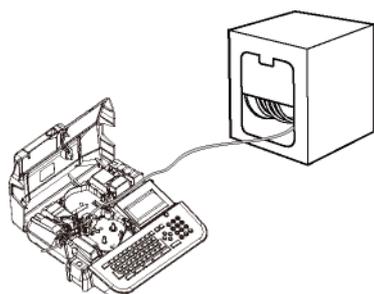


6. Make sure the ribbon is not slack.


If the ribbon is slack, rotate the winding core (black) toward the direction of the arrow to remove the slack of the ribbon.

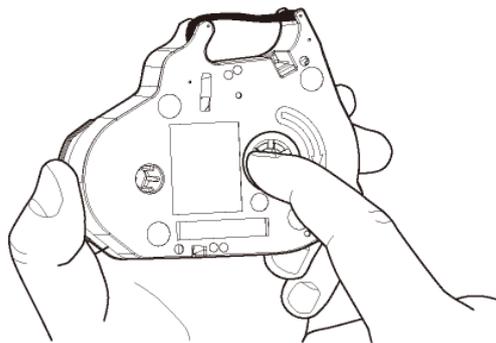


7. Hold the ink ribbon case as illustrated below and load it completely.

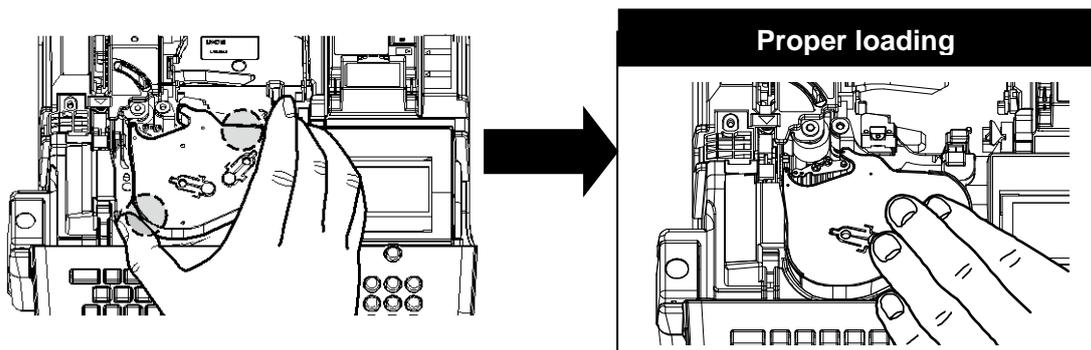

**Check the slack.**

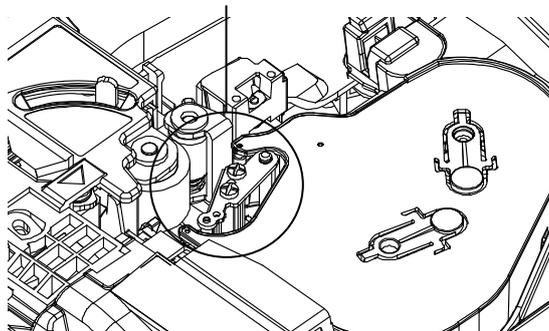

8. Pull the head release lever.

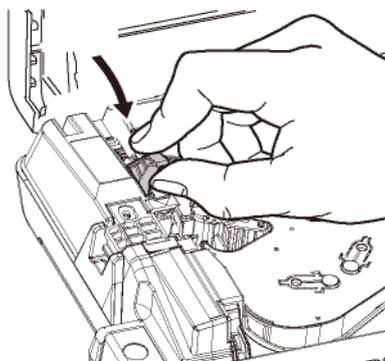


9. Close the cassette cover until it clicks.

### 3. LOADING THE CONSUMABLES

---


#### (Removing the tube)

1. Open the cassette cover.
2. Push the head release lever behind.

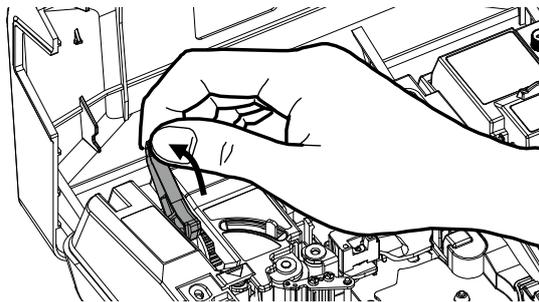


3. Slide the switching lever to the right until it stops, then remove the tube.

**Note:** You don't need to remove the ink ribbon case when removing tube.

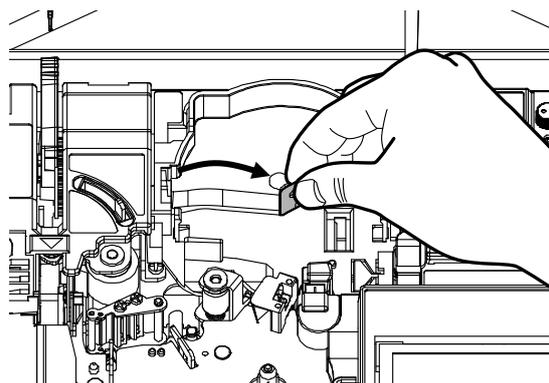

4. Pull the head release lever, then close the cassette cover until it clicks.

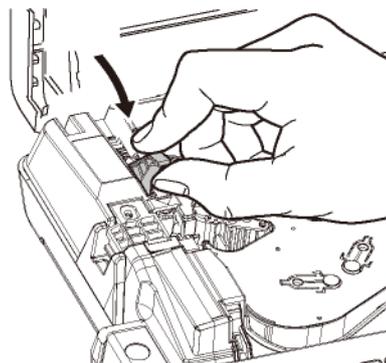


#### **Caution**

**Be careful when operating the Head release lever.**


If the lever is slipped off during operating the lever, it might cause the injury.

### 3-3 LOADING THE TAPE CASSETTE AND THE INK RIBBON CASE


1. Open the cassette cover.
2. Push the head release lever behind.

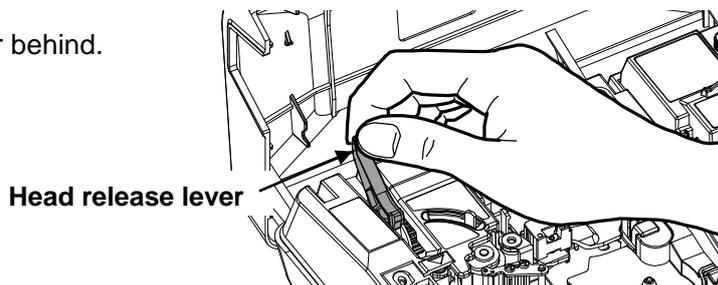

3. Slide the switching lever to the right until it stops, as shown in the figure.


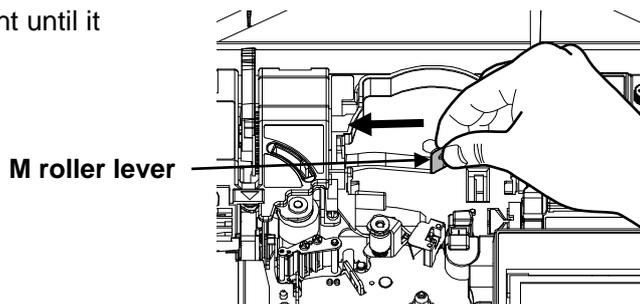


4. Load the tape cassette.

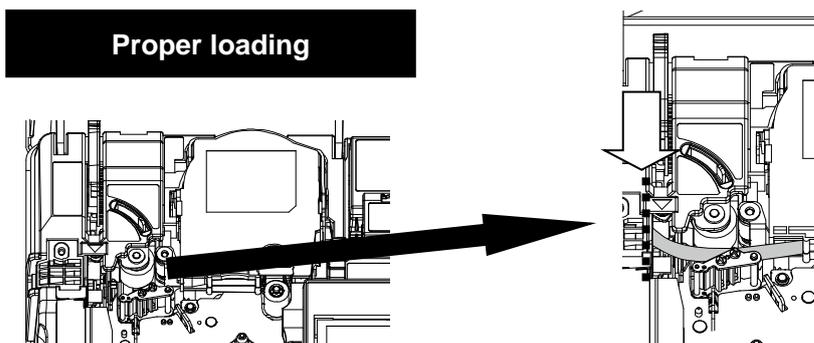


**REQUEST**

- Before loading the tape cassette, prepare it as illustrated below.
- (1) Pass the tape through the guides.
  - (2) Pull out the tip of the tape by about 4cm (1-5/8").

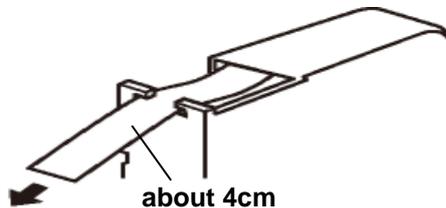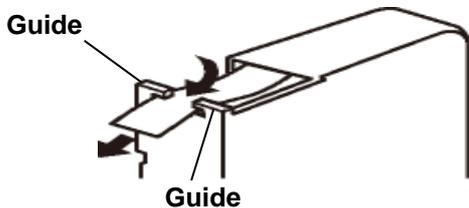


5. Make sure the ribbon is not slack.  
If the ribbon is slack, rotate the winding core toward the direction of the arrow to remove the slack of the ribbon.

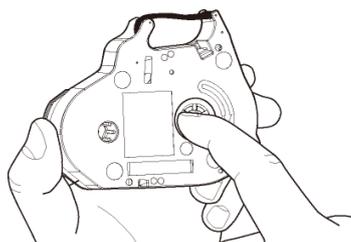


### 3. LOADING THE CONSUMABLES

---


6. Hold the ink ribbon case as illustrated below and load it.

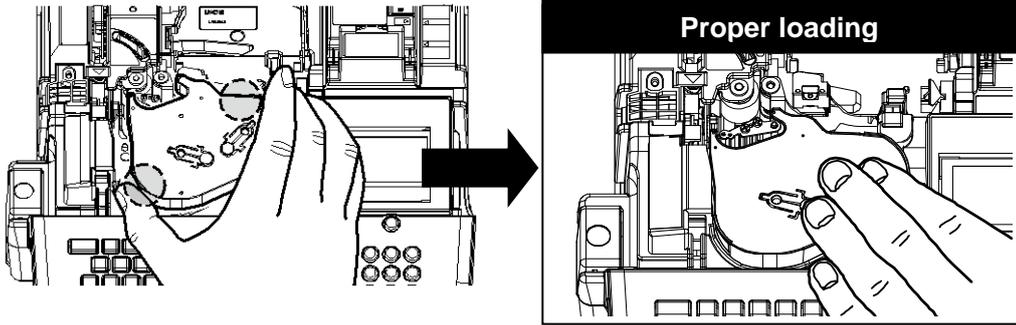

**Note:** Make sure the ribbon is not slack.

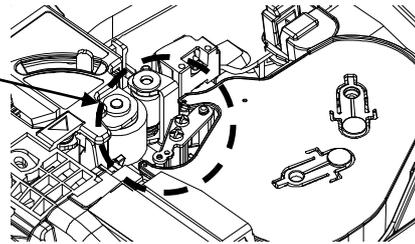


7. Pull the head release lever forward.

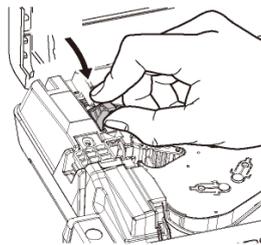

8. Close the cassette cover until it clicks.


#### (Removing the tape cassette)

1. Open the cassette cover.
2. Push the head release lever behind.

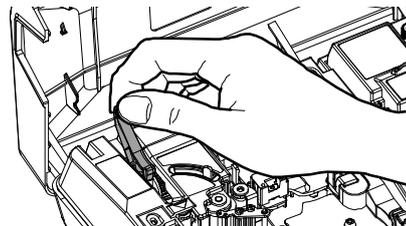


3. Remove the tape cassette

**Note:** You don't need to remove the ink ribbon case when removing tape cassette.

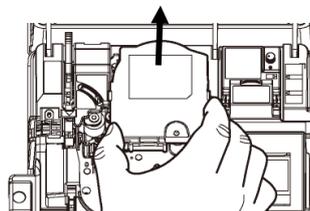

4. Pull the head release lever forward, then close the cassette cover until it clicks.

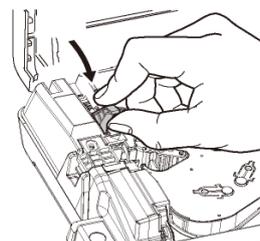

### 3-4 REPLACING THE HALF CUTTER

1. Open the cassette cover.
2. Pull out the half cutter.
3. Engage the guide of the half cutter to the groove of the half cutter holder and insert it completely.

**Note:** If the guide is not properly engaged in the groove, the half cutter or the machine might be damaged.

Make sure to use the designated half cutter LM-HC340 (yellow color).

## 4. BASIC OPERATION

1. Open the cassette cover and load the consumables to use. (See 3: LOADING THE CONSUMABLES) Then, close the cassette cover and turn the power on.

2. [PRINTED MATERIAL setting screen] appears.  
Press ▲/▼/◀/▶ key to select "PRINTED MATERIAL" and "SIZE."

```
[PRINTED MATERIAL]
MATERIAL= MAX TUBE
SIZE=3. 2
```

Press [ENTER], then [INPUT screen] appears.

- ▲/▼ key: Move the cursor between "MATERIAL" and "SIZE"
- ◀/▶ key: "MATERIAL" ... Select from "GENERIC TUBE", "MAX TUBE", "SHRINKABLE TUBE", "NON PVC TUBE" or "TAPE"
- "SIZE" .....
- MAX TUBE:** Select from "3.2", "3.6", "4.2", "5.2" or "6.4".
- GENERIC TUBE:** Select from "2.5", "3.2", "3.6", "4.2", "5.2", "5.5", "6.0" or "6.5".
- SHRINKABLE TUBE:** Select from "2.5", "3.2", "3.6", "4.2", "5.2", "5.5", "6.0" or "6.5".
- NON PVC TUBE ("PVC free" TUBE):** Select from "3.2", "3.6", "4.2" or "5.2."
- TAPE:** Select from "5", "9" or "12."

**Note:** • When changing the material, press [SHIFT] → [Esc](P.MATERIAL).

Then [PRINTED MATERIAL setting screen] appears.

After changing the kind of material ("TUBE" to "TAPE" or "TAPE" to "TUBE"), [PITCH LENGTH setting screen] appears. Input the desired pitch length and then press [ENTER].

- When changing the material with pressing [SHIFT] → [Esc](P.MATERIAL), the "CHARACTER SIZE" is automatically changed to "AUTO".


However, when the selected printed material is TAPE, "CHARACTER SIZE" is not changed to "AUTO".

- If any document is remained in the [INPUT screen] before turning off the power, the right screen appears when turning the power on next time.

```
FILE BEING INPUT
INITIALIZE
CONTINUE
```

Press ▲/▼ key to select "INITIALIZE" or "CONTINUE."

4-1 PRINTING ON THE TUBE (PITCH PRINT)

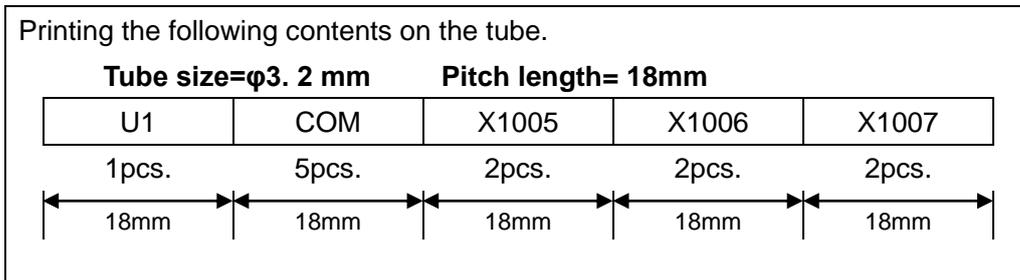


1. Set "MATERIAL = TUBE" and "SIZE = 3.2mm" in the [PRINTED MATERIAL setting screen].
2. [INPUT screen] appears. Make sure that the arrow symbol "▲" is indicating "A" = capital letters.

Press ◀/▶ key to move the cursor to **P**.

3. Press [PITCH] to set "PITCH LENGTH." (See 6-4-1: PITCH LENGTH) Press ◀/▶ key to set "18.0."

Press [ENTER].

**Note:** It is also possible to input the value directly with the Ten keys.

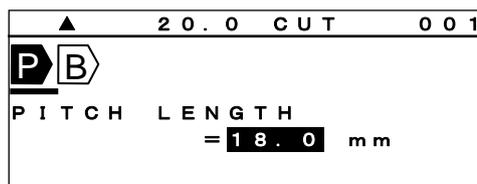


4. Press ▶ key to move the cursor after **B**.


Press [RPT] to set "REPEAT." (See 6-7: REPEAT)

Press ◀/▶ key to set "1." Press [ENTER].

**Note:** It is also possible to enter the value directly with Ten key.

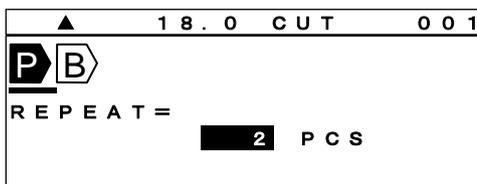


5. Input **U 1**. Press [BLOCK] to create a new block.

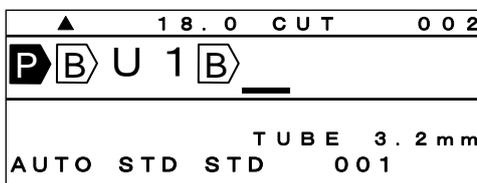

6. As same as "4", press [RPT] to set "Repeat" to "5." Press [ENTER].


#### 4. BASIC OPERATION

7. Input **C O M**. Press **BLOCK** to create a new block.

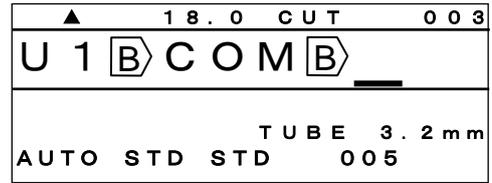


8. As same as “4”, press **RPT** to set “Repeat” to “2.” Press **ENTER**.



9. Input **X**. Press **SEQ** to set “SEQUENCE.”  
(See 6-8: SEQUENCE)

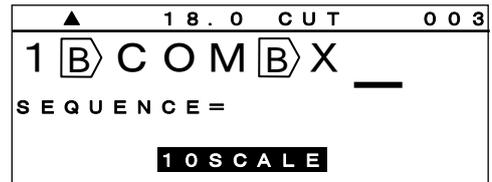


10. Press **ENTER** to select “10 scale.” Set the “START NUMBER” and “END NUMBER.”  
Input **1 0 0 5** in the “START.”  
Press **▼** key to set the “END NUMBER.”  
Input **1 0 0 7** in the “END.”  
Press **ENTER**.

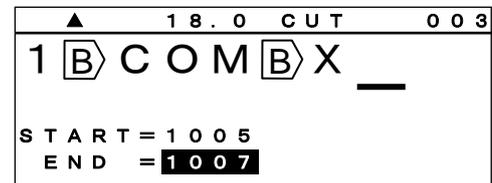

11. Select print range by pressing **←** and **→**.  
Press **ENTER**.

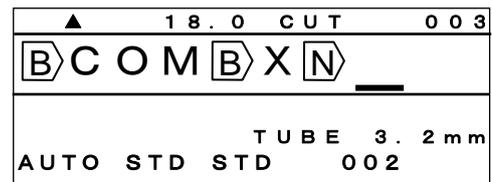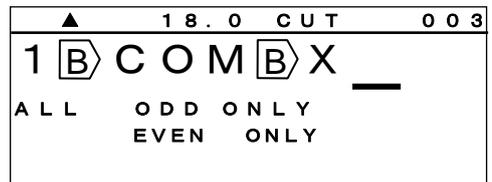


12. Press **PRINT**.  
[PRINTING RANGE setting screen] appears.  
(See 7: PRINTING)

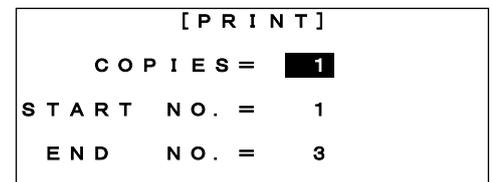


13. Press **ENTER**. [PRINTING LENGTH ALIGNMENT screen] appears.  
Press **ENTER** to start printing.

14. The printed result is as shown below.

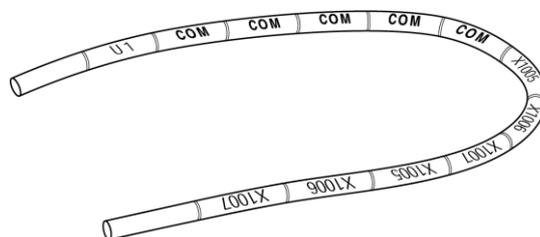

## 4-2 PRINTING ON THE TAPE

### 4-2-1 PITCH PRINT ON THE TAPE

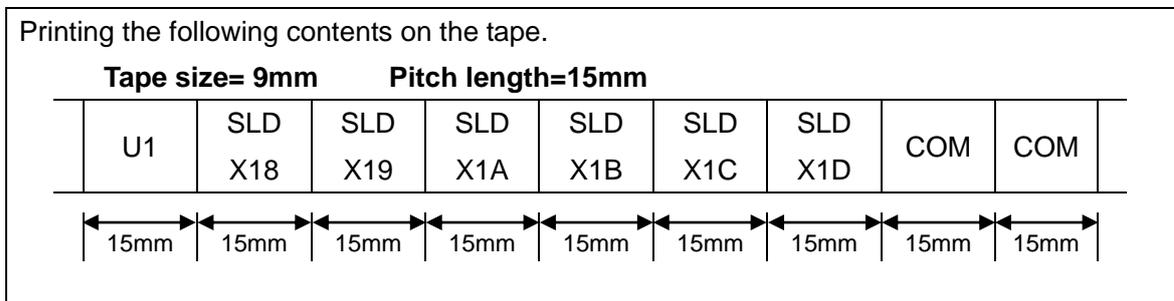


1. Set "MATERIAL=TAPE" and "SIZE=9mm" in the [PRINTED MATERIAL setting screen].
2. [INPUT screen] appears. Make sure that the arrow symbol "▲" is indicating "A" = capital letters.

Press ◀/▶ key to move the cursor to **P**.


3. Press **PITCH** to set "PITCH LENGTH." (See 6-4-1: PITCH LENGTH) Press ◀/▶ key to set "15.0."

Press **ENTER**.


**Note:** It is also possible to input the value directly with Ten key.

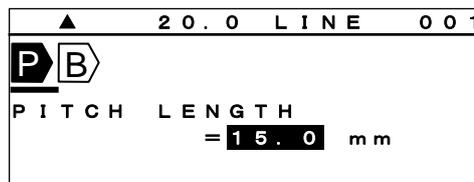


4. Press ▶ key to move the cursor after **B**.  
 Input **U** **1**. Press **BLOCK** to create a new block.

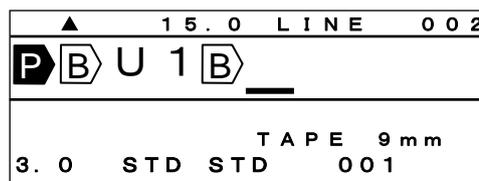

5. Input **S** **L** **D** ◀, then **X**.

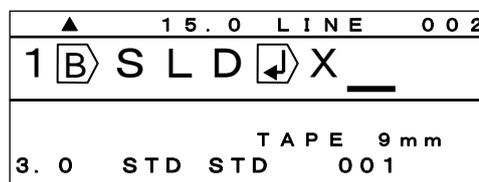

6. Press **SEQ** to set "SEQUENCE."  
 (See 6-8: SEQUENCE)  
 Press ◀/▶ key to select "16 SCALE."

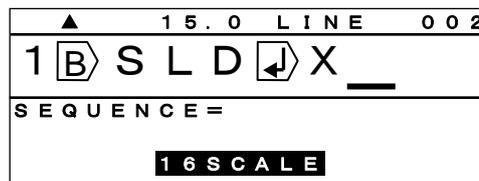

#### 4. BASIC OPERATION

7. Pressing **ENTER**. Set the “**START NUMBER**” and “**END NUMBER.**”

Input **1 8** in the “**START.**”

Press **▼** key to set the “**END NUMBER.**”

Input **1 D** in the “**END.**”

Press **ENTER**.

▲	15.0	LINE	002
1	B	SLD	X
START = 18			
END = 1D			

8. Select print range by pressing **←** or **→**.

Press **ENTER**.

▲	15.0	LINE	002
1	B	SLD	X
ALL ODD ONLY			
EVEN ONLY			

9. Press **BLOCK** to create a new block, and then input **C O M**.

▲	15.0	LINE	003
X	N	B	COM
TAPE 9mm			
3.0	STD	STD	001

10. Press **RPT** to set “**REPEAT.**”

(See 6-7: REPEAT)

Press **◀/▶** key to set “**2.**” Press **ENTER**.

▲	15.0	LINE	003
X	N	B	COM
REPEAT =			
2 PCS			

**Note:** It is also possible to input the value directly with Ten key.

▲	15.0	LINE	003
X	N	B	COM
TAPE 9mm			
3.0	STD	STD	002

11. Press **PRINT**. (See 7: PRINTING)

[PRINTING RANGE setting screen] appears.

[ PRINT ]			
COPIES = 1			
START NO. = 1			
END NO. = 3			


12. Press **ENTER**. [PRINTING LENGTH ALIGNMENT screen] appears.

Press **ENTER** again to start printing.

13. The printed result is as shown below.

◀	U1	SLD X18	SLD X19	SLD X1A	SLD X1B	SLD X1C	SLD X1D	COM	COM
---	----	------------	------------	------------	------------	------------	------------	-----	-----

4-2-2 NORMAL PRINT ON THE TAPE

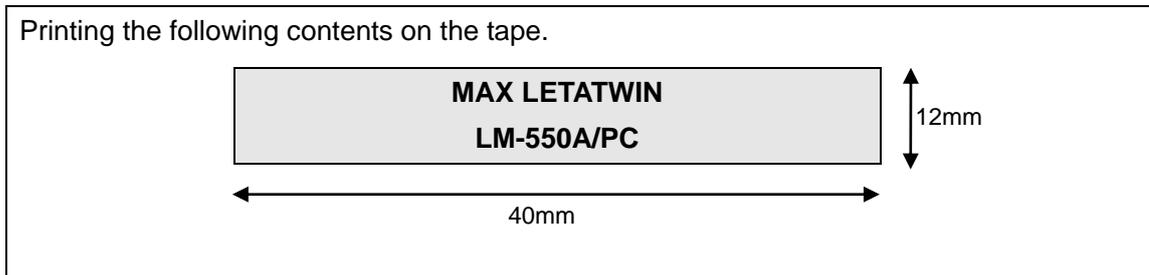


1. Set “**MATERIAL=TAPE**” and “**SIZE=12mm**” in the [**PRINTED MATERIAL setting screen**].
2. [**INPUT screen**] appears. Make sure that the arrow symbol “▲” is indicating “A” = capital letters.

Press ◀/▶ key to move the cursor to P.

3. In order to change to [**NORMAL PRINT MODE**], press


DELET to delete P. (See 6-5: **NORMAL PRINT**)

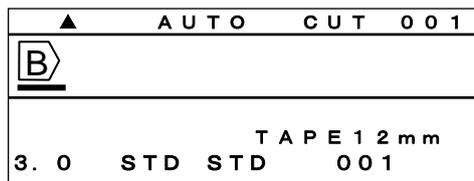

4. Press SHIFT → SIZE (TP/LNG) and set “**PRINTING LENGTH.**” (See 6-5-1: **Printing length**)

Press ◀/▶ key to select “**AUTO=OFF.**”


Then, press ▲ key to set the “**LENGTH**” and input 4 0.

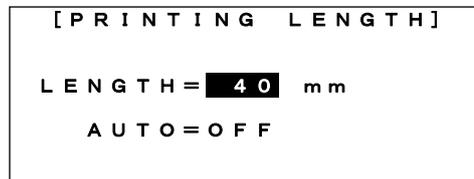

5. Press ENTER.

[**MARGIN setting screen**] appears.

Press ENTER.

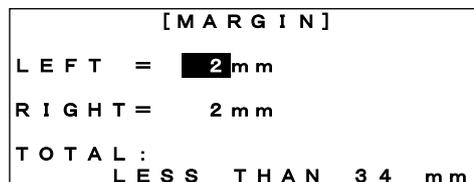

#### 4. BASIC OPERATION

---

6. [INPUT screen] appears. Press ► key to move the cursor

after **B**►.

Input **M** **A** **X** **SPACE** **L** **E** **T**

**A** **T** **W** **I** **N** ◀

**L** **M** **SHIFT** → **A** **5** **5** **0**

**A** **SHIFT** → **F** **P** **C**.

▲				4 0				C U T				0 0 1			
B	L	M	-	5	5	0	A	/	P						
				T A P E 1 2 m m											
3 . 0	S T D	S T D	0 0 1												

7. Press **PRINT** to start printing. (See 7: PRINTING)

8. The printed result is as shown below.

	<b>MAX LETATWIN</b> <b>LM-550A/PC</b>	
--	--	--

## 5. INPUTTING AND DELETING CHARACTERS

### 5-1 INPUTTING CHARACTERS

1. To input the capital letter "A."

- 1) Press  and make sure that the arrow symbol "▲" is indicating "A" = capital letters.

- 2) Press        

2. To input the small letter "a."

- 1) Press  and make sure that the arrow symbol "▲" is indicating "a" = small letters.

- 2) Press        

3. To input "+."


- 1) Press  and check that the symbol "SHIFT" is on.

- 2) Press        

### 5-2 DELETING CHARACTERS

1. :

- 1) Press .

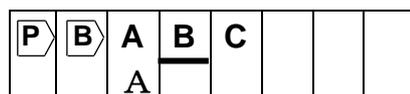

- 2) The character on the cursor is deleted.



2. :

- 1) Press .



- 2) The character before the cursor is deleted.



**5-3 INPUTTING CHARACTERS WITH “CODE” FUNCTION**

- Using the “CODE” function, you can input the characters according to the following table.  
(When English is selected as the screen language.)

[ The Table of Code ]


Code No.	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
2		!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6	‘	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7	p	q	r	s	t	u	v	w	γ	L	z	{		}	~	

- When selecting Chinese(C) or Chinese(T) as the screen language, you can input the Chinese characters according to “GB code” or “BIG5 code.”


(See 2-6: SELECTING SCREEN MESSAGE)

[ Inputting “@” with “CODE” function ]

1. Press [CODE]. The [CODE setting screen] appears.
2. Press [4][0] key according to the table of code, to input “@.”

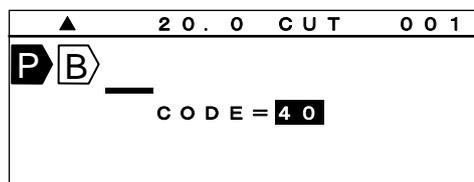


3. Press [ENTER].

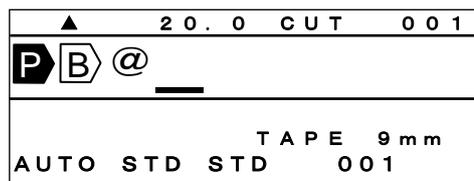

**Note:** You can input the characters without the table of code.

1. Press [CODE] twice.  
The all of characters appears.

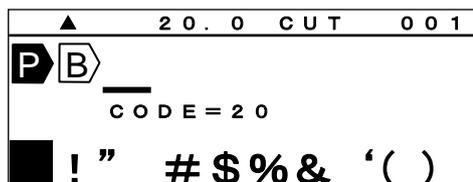

2. Press ◀/▶/▲/▼ key to select the character, and then press [ENTER].

### 5-4 INPUTTING CHARACTERS WITH “DIACR” FUNCTION


- Using the “DIACR” function, you can input the diacritics for European languages.  
(When English / German / French / Italian / Spanish / Polish / Russian / Turkish is selected as the screen language.)

#### [ The Table of Diacritics for European languages ]


Ä	À	Á	Â	Å	Ą	Ć	Ç	Ë	È
É	Ê	Ë	Ğ	İ	Ì	Í	Î	Ï	Į
Ł	Ń	Ñ	Ö	Ò	Ó	Ô	Ś	Ş	Ü
Ù	Ú	Û	Ž	Ž	Ø	Æ	Œ		
ä	à	á	â	å	ą	ć	ç	ë	è
é	ê	ë	ğ	ı	ì	í	î	ï	į
ł	ń	ñ	ö	ò	ó	ô	ś	ş	ü
ù	ú	û	ž	ž	ø	æ	œ	ß	

- Press **DIACR**.

The [DIACR select screen] appears.

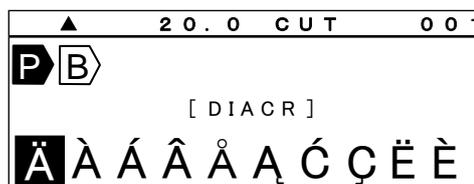

- Press **◀/▶/▲/▼** key to select the character, and then press **ENTER**.

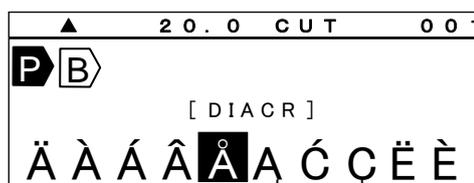

Note: • Press **▲/▼** key to display the following 10 character.

## 6. FUNCTIONS

The following table shows the setting items and their default values.

SETTING ITEM	DEFAULT VALUE	SETTING ITEM	DEFAULT VALUE
<i>Printed material</i>	MAX tube	Sequence	No setting
<i>Size of printed material</i>	No setting	Justification	CENTER
Character size	AUTO: ON	<i>6, 9 mark</i>	(6 9)
Character width	STANDARD	<i>Printing density</i>	4
Character space	STD	<i>Cutting position</i>	0.0mm
Line space	STD	<i>Printing alignment</i>	0mm
Pitch length	TAPE: 10.0 mm	<i>LCD brightness</i>	4
	TUBE: 20.0 mm	<i>Auto power-off</i>	YES
Pitch cut	TAPE: LINE	<i>Position of printing line</i>	0
	TUBE: HALF-CUTTING	<i>Printing style of [RPT]&amp;[SEQ]</i>	A: 11,22,33
Vertical or horizontal	HORIZONTAL	<i>Feed the head of tube</i>	YES
Frame	NO	<i>Low temp mode</i>	NO
Printing length	AUTO	<i>LCD backlight</i>	LIGHT
Margin	2 mm each		
	TAPE: 1		
Repeat	TUBE: 2		

- Note:**
- By pressing **[SHIFT]** → **[BS]** (INIT.) in **[INPUT screen]**, all of setting items can be returned to the default values.
  - The italic characters show that these setting items are unable to return to the default value by initializing.



### 6-1 SIZE

Setting the “**CHARACTER SIZE**” of the line at the cursor position.

The size can be set in each line. But, the different sizes cannot be set in the same line of the same block.

**Selectable items:** “**SIZE**” = 1.3, 2.0, 3.0, 4.0, 6.0      “**AUTO**” = ON, OFF, SUPER

- Press **[SIZE]**. The **[CHARACTER SIZE setting screen]** appears.
- Press **◀/▶** key to select the value of the “**CHARACTER SIZE**.”
- Press **▼** key to move the cursor to “**AUTO**.”  
Press **◀/▶** key to select “**OFF**”, “**AUTO**” or “**SUPER**”. Setting **AUTO SIZE SUPER** can make the length of printed words much shorter than normal **AUTO SIZE**.

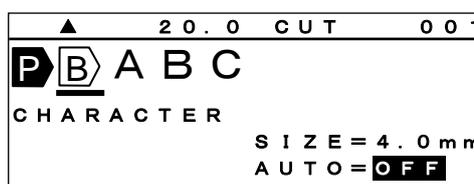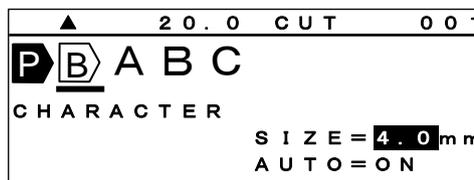

4. Press **ENTER**.

- Note:**
- Only when the “**AUTO**” is selected to “**OFF**”, the size setting is available.
  - The selectable “**CHARACTER SIZE**” varies depending on the size of the material, the “**PITCH LENGTH**” and the number of lines, etc.
  - When the “**AUTO**” is selected in the “**CHARACTER SIZE**”, the character sizes change automatically, depending on the size of material, pitch length and the number of lines in each block.

## 6-2 WIDTH

Setting the “**CHARACTER WIDTH**” at the cursor position.


Selectable items: **STANDARD, CONDENSED, EXTENDED**

**Note:** You can select “**CHARACTER WIDTH**” according to the following table.

PRINTING MODE	PRINTING DIRECTION	STANDARD	CONDENSED	EXTENDED
Pitch print (Tube)	Horizontal	A	A	A
	Vertical	A	A	A
Pitch print (Tape)	Horizontal	A	A	A
	Vertical	A	A	A
Normal print (Tape)	Horizontal	A	A	A
	Vertical	A	A	A

**Note:** For “**Vertical printing direction**”, see “**6-6: VERTICAL**”.

1. Press **WIDTH**. The [**CHARACTER WIDTH setting screen**] appears.

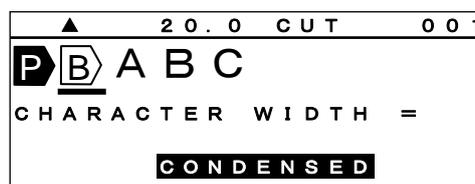

## 6. FUNCTIONS


---

2. Press ◀/▶ key to select the **“CHARACTER WIDTH.”**
3. Press **[ENTER]**.

### 6-3 CHARACTER / LINE SPACE

Setting the **“CHARACTER / LINE SPACE”** for the document.

**Selectable items:**  
**“CHARACTER SPACE”** = STD (STANDARD), CLS (CLOSE), CNT (CONTACT), WID (WIDE)  
**“LINE SPACE”** = STD (STANDARD), CLS (CLOSE), WID (WIDE), CNT (CONTACT)

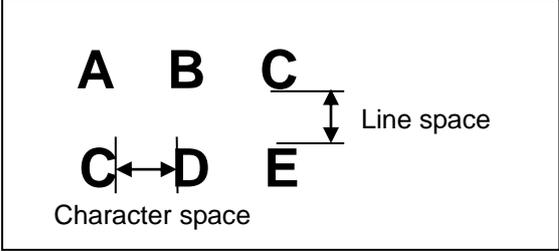

1. Press **[C/SPC]**. The **[CHARACTER / LINE SPACE setting screen]** appears.

```
[ CHARACTER  
  / LINE SPACE ]  
  
C / SPACE = STD  
L / SPACE = STD
```

2. Press ◀/▶ key to select the value of the **“C / SPACE.”**  
Then press ▼ key to move the cursor to the **“L / SPACE.”**

```
[ CHARACTER  
  / LINE SPACE ]  
  
C / SPACE = WID  
L / SPACE = STD
```

3. Press ◀/▶ key to select the value of the **“L / SPACE.”**

```
[ CHARACTER  
  / LINE SPACE ]  
  
C / SPACE = WID  
L / SPACE = CLS
```

4. Press **[ENTER]**.

**Note:** In some cases, the error message (“**SIZE-OVER**”) may appear depending on the size of the material or character, and the number of lines.


If the error message appears, check the size of the material, character and the number of lines.  
 (See 8-1: ERROR MESSAGE LIST)

**6-4 PITCH PRINT**  
**[PITCH PRINT MODE]**


**P** on the top of the document means that LM-550E is in the **[PITCH PRINT MODE]**.

By deleting the **P**, it switches to the **[NORMAL PRINT MODE]**.

(See 6-5: NORMAL PRINT)

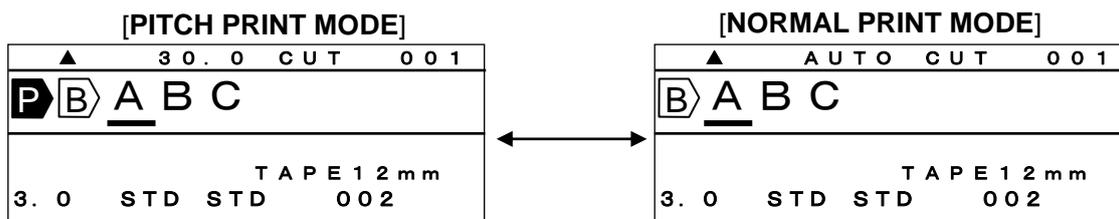

**Note:** In the **[PITCH PRINT MODE]**, it prints every block ( **B** ) at the same pitch length and centers the texts as illustrated bellow.

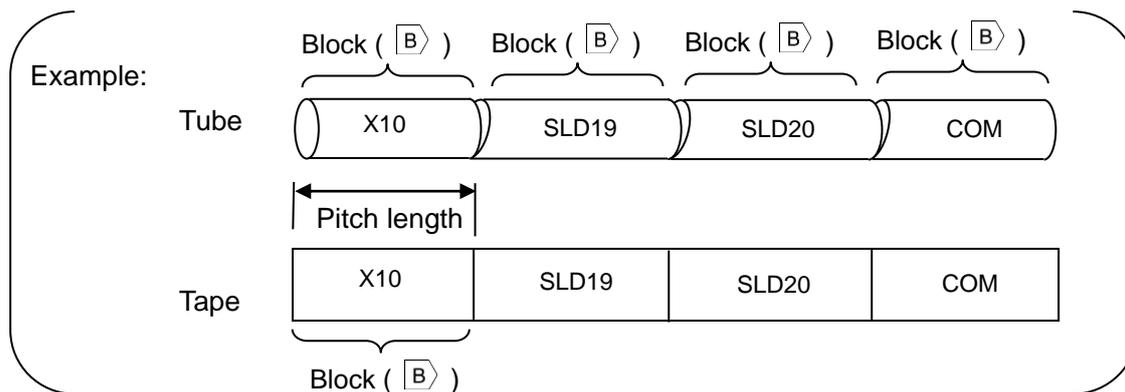


### 6-4-1 PITCH LENGTH

Setting the "PITCH LENGTH" at the cursor position.

**Setting range: "Tube" = AUTO or 10.0~60.0mm, "Tape" = AUTO or 4.0~60.0mm**

1. Press ◀/▶ key to move the cursor under P and press PITCH.  
The [PITCH LENGTH setting screen] appears.
2. Press ◀/▶ key or Ten key to input the value of the "PITCH LENGTH."
3. By pressing ENTER, the "PITCH LENGTH" is set and the [INPUT screen] appears.

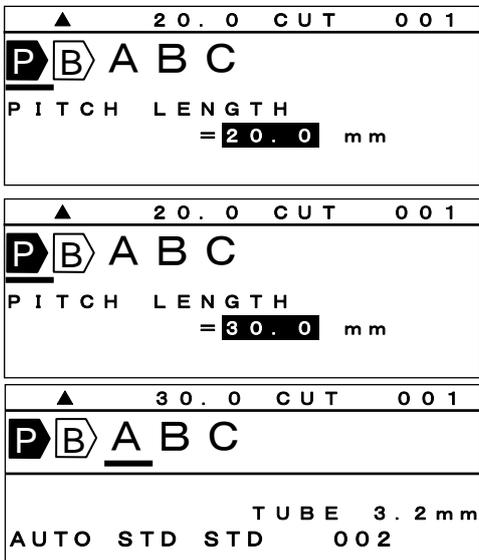


**Note:**

- Up to 5 different "PITCH LENGTH" can be set in one document..
- The default value of "PITCH LENGTH" can be changed in the "OPTION" setting.

**("AUTO" pitch function)**

By pressing ▲/▼, "AUTO" is selectable as "PITCH LENGTH" for TUBE only.

**Note:** When "AUTO" is selected, pitch length is automatically adjusted according to the number of characters, character size, character width, etc.

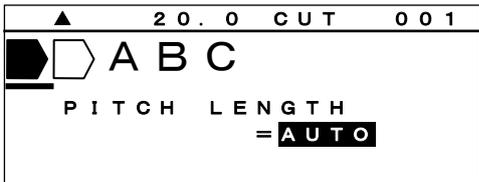

### 6-4-2 PITCH CUT

Setting how to divide each block.

Selectable items:			
No	LINE	DOTS	HALF-CUTTING
ABC 123	ABC 123	ABC 123	ABC 123

1. Press **SHIFT** → **PITCH**(P/CUT).  
The **[PITCH CUTTING select screen]** appears.

```
[ P I T C H   C U T T I N G ]  
N O   L I N E   D O T S  
H A L F - C U T T I N G
```

2. Select by pressing **◀/▶/▼/▲** key and press **ENTER**.  
Then the **[INPUT screen]** appears.


**Note:** “PITCH CUT” setting is not available in the **[NORMAL PRINT MODE]**.

## 6-5 NORMAL PRINT

### [NORMAL PRINT MODE]

In the [NORMAL PRINT MODE], the pitch print function is not available. In this mode, the maximum total printing length is 300mm.

Deleting  in the [INPUT screen].

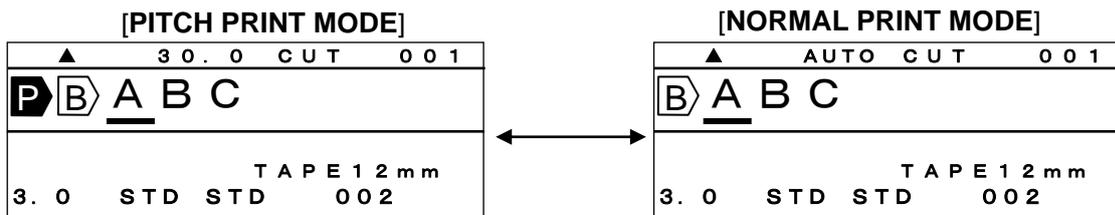

### 6-5-1 PRINTING LENGTH

Setting the total length of the document.

Setting range: "LENGTH" = 10~300mm, "AUTO" = ON, OFF

**Note:** Make sure "AUTO" is "OFF" in the [PRINTING LENGTH setting screen]. When "AUTO" is "ON," "PRINTING LENGTH" cannot be manually changed. (The "LENGTH" is shown as "----.")

1. Press  →  (TP/LNG) to display the [PRINTING LENGTH setting screen].

```
[PRINTING LENGTH]
LENGTH = 150 mm
AUTO = OFF
```

2. Press / key or Ten key to input the value of the "LENGTH." Press . And then the [MARGIN setting screen] appears.

### 6-5-2 MARGIN

Setting the left and right "MARGIN" of a document.

Setting range: 2~30mm

1. After setting the "PRINTING LENGTH," the [MARGIN setting screen] appears.

```
[MARGIN]
LEFT = 2 mm
RIGHT = 2 mm
```

2. Press / key or Ten key to input the value of the "MARGIN." Press .

## 6-6 VERTICAL

Setting to print the texts in the vertical orientation.

Selectable items: YES (vertical), NO (horizontal)

**Note:** The printed result varies depending on the selected “PRINT MODE.”

You can select “PRINTING DIRECTION” according to the following table.

PRINT MODE	MATERIAL	HORIZONTAL	VERTICAL
PITCH PRINT	Tube	COM	COM
	Tape	COM	COM
NORMAL PRINT	Tape	COM	COM

1. Press **[SHIFT]** → **[C/SPC]** (VRT). The **[VERTICAL setting screen]** appears.

```

[ V E R T I C A L ]

Y E S      N O

Y E S = V E R T I C A L
N O = H O R I Z O N T A L

```

2. Press **◀/▶** key to select.

```

[ V E R T I C A L ]

Y E S      N O

Y E S = V E R T I C A L
N O = H O R I Z O N T A L

```


3. Press **[ENTER]**.

**Note:**

- Both of “VERTICAL” and “HORIZONTAL” cannot be set in a same document.
- If the error message (“SIZE-OVER”) appears, check the size of the material, character size, and the number of lines. (See 8-1: ERROR MESSAGE LIST)


## 6-7 REPEAT

Setting the number of multiple copies of a particular block.

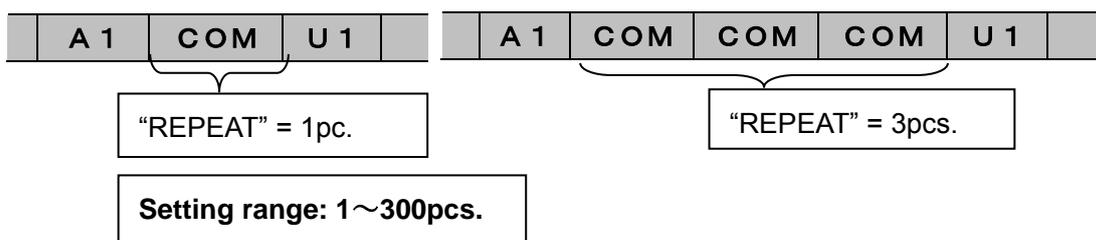


## 6. FUNCTIONS

1. Press **[RPT]**. The **[REPEAT setting screen]** appears.

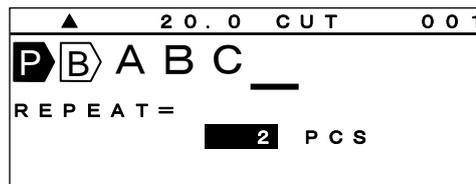

2. Press **◀/▶** key or Ten key to input the value of the "REPEAT."

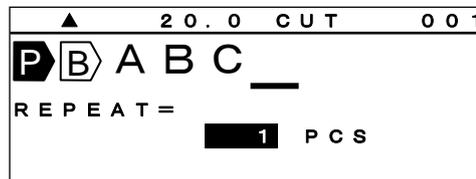

3. Press **[ENTER]**.

**Note:** The default value of "REPEAT" can be changed in the "OPTION" setting.


### 6-8 SEQUENCE

Setting sequential (running) numbers. To activate "SEQUENCE" function, set the "START" number and "END" number as below.


If the "SEQUENCE" is set, **[N]** appears.

Selectable items: 8 SCALE = 0 ~7777, 10 SCALE = 0~9999, 16 SCALE = 0~FFFF, ALPHABET = A~Z, a~z


1. Press **[SEQ]**. The **[SEQUENCE setting screen]** appears.

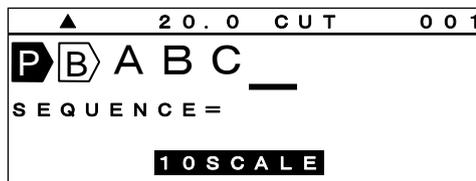

2. After selecting the type of the "SEQUENCE" using **◀/▶** key, press **[ENTER]**.  
The **[START and the END number setting screen]** appears.

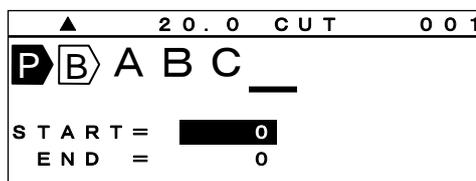

3. Press **◀/▶** key or Ten key to input the value of the "START."

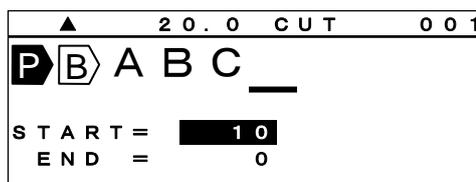

4. Press **▼** key to move the cursor to the “END.” And then Press **◀/▶** key or Ten key to input the value of the “END.”

▲	2 0 . 0	C U T	0 0 1
P	B	A B C	_
S T A R T =		1 0	
E N D =		2 0	

5. Select print range by pressing **←** or **→**.  
Press **ENTER**.


▲	2 0 . 0	C U T	0 0 1
P	B	A B C	_
A L L		O D D O N L Y	
		E V E N O N L Y	

- Note:**
- Make sure to set both the “START” number and the “END” number.
  - In the [PITCH PRINT MODE], you can set only one series of “SEQUENCE” in one block and up to 15 series of “SEQUENCE” in one document.
  - In the [NORMAL PRINT MODE], you can set only one series of “SEQUENCE” in one document.
  - When you change the [PITCH PRINT MODE] to the [NORMAL PRINT MODE], all the “SEQUENCE” settings are automatically cancelled except for the first “SEQUENCE” setting.

## 6-9 FRAME

Setting to frame a document.

This function allows you to surround the text with a frame.

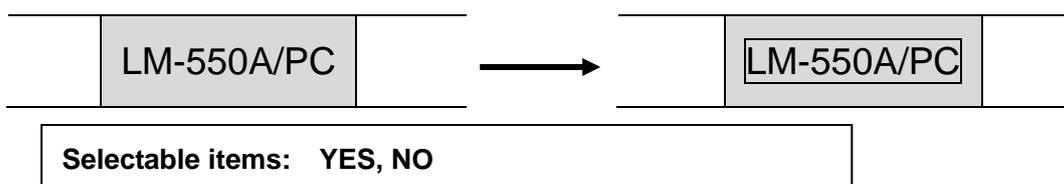

1. Press **SHIFT** → **RPT** (FRAME). The [FRAME setting screen] appears.

[ F R A M E ]
Y E S    N O

2. Switch item by pressing **←**, or **→**. Press **ENTER**.

- Note:**
- In the [PITCH PRINT MODE], the “FRAME” is applied to each block.
  - In the [NORMAL PRINT MODE], the “FRAME” is applied to the whole document.


**6-10 SYMBOL**

Inputting various symbols.


**Selectable group of symbols:**  
**NUMERAL, ALPHABET IN CIRCLE, UNIT, OFFICE SYMBOLS, SUPERSCRIPT, SUBSCRIPT, ELECTRICAL INSTALLATION ①~③, ITALIC, GREEK, UPPER CASE RUSSIAN and LOWER CASE RUSSIAN**  
**Note:** “**LARGE RUSSIAN**” and “**SMALL RUSSIAN**” can be displayed in the LM-550E A12-C, when the screen language is English. Please check the model of your LM-550E.

2. Press **SYMBOL**.


The **[SYMBOL select screen]** appears.

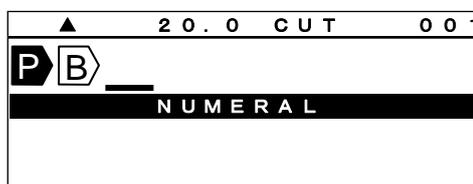

2. Press **◀/▶** key to select the group of “**SYMBOLS.**”

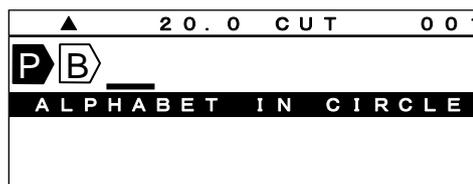


3. Press **ENTER**. Symbols are displayed.

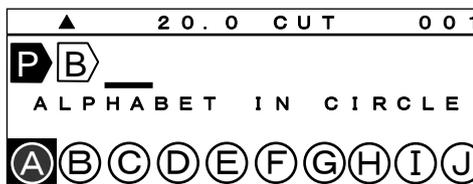

4. Press **◀/▶** key to select a desired symbol.

5. Press **ENTER** to input the symbol at the cursor position.

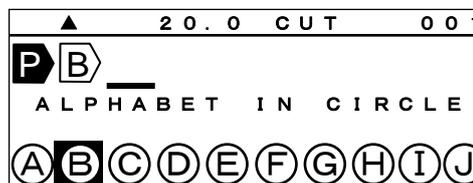

Note: • Press **▲/▼** key to display the following 10 symbols.


## 6-11 REGISTRATION OF WORD

Up to 30 words can be saved in the internal memory. Up to 15 characters can be included in a word.

**Note:** , ,  and  cannot be saved.

1. Press **WORD**.

The **[MEMORY OF WORD setting screen]** appears.

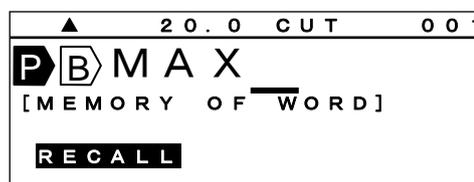

2. Press  key to select a desired item and press **ENTER**.


**Selectable Items: RECALL, SAVE, DELETE, INITIALIZE**

### [SAVE]

Saving the "WORD."

1. Select "SAVE." And then press **ENTER**.


The **[STARTING POSITION setting screen]** appears.

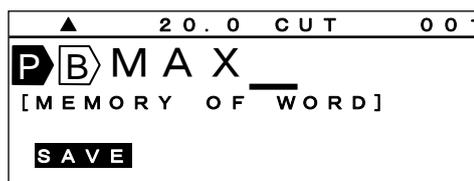

2. Press  key to move the cursor to the first character of the word to be saved. And then press


**ENTER**.

The **[ENDING POSITION setting screen]** appears.

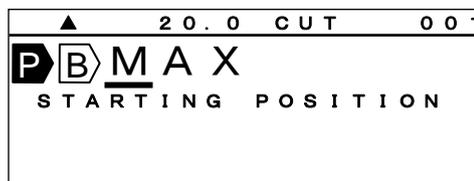

3. Press  key to move the cursor to the last character of the word. And then press **ENTER**.


The **[FILE NO. setting screen]** appears.

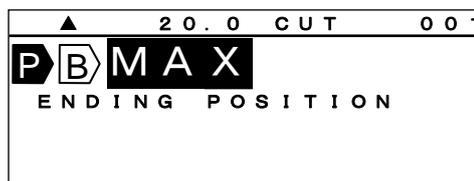

4. Press  key or Ten key to input the file No.

**Setting range: 1~30**


4. Press **ENTER** to register the selected word in the file.

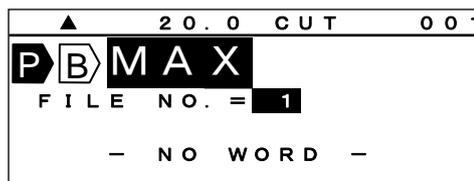

**[RECALL]**


Recalling the saved “WORD.”

1. Select “RECALL”. And then press .

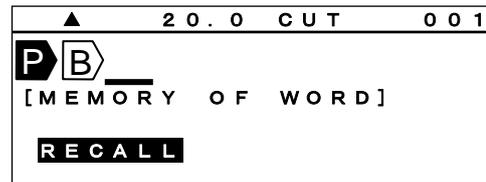

2. Press ◀/▶ key or Ten key to select the desired file No.

Then the word of the desired file is displayed at the bottom of the screen.

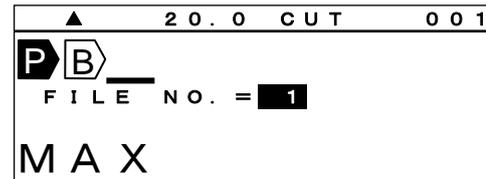


3. Press  to insert the word at the cursor position.

**[DELETE]**


Deleting the registered “WORD.”

1. Select . And then press .

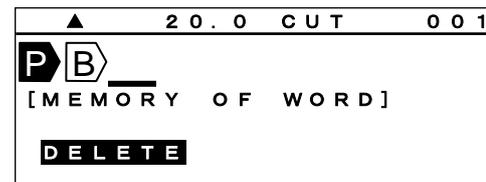

2. Press ◀/▶ key or Ten key to input file No.


3. Press  to delete the saved word.

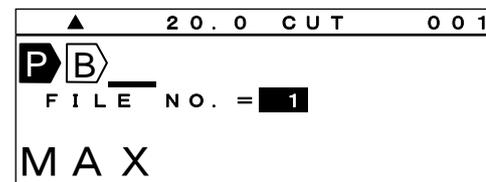

**[INITIALIZE]**


Deleting all of the registered “WORD.”

1. Select  And then press .

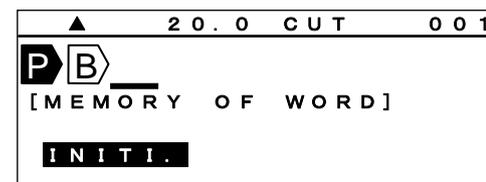

2. Press ◀/▶ key to select “YES.”

3. Press  to initialize.

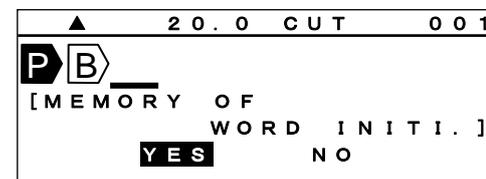

**6-12 IMAGE**

Press **IMAGE**.

Previewing a document to get the following information about tubes and tapes before printing.

- 1) Total print length    2) Preview of the document

▲ key: Temporarily stops the “**IMAGE**” scroll.

▶ key: Increases the scroll speed.


◀ key: Reduces the scroll speed.

**ESC**: Cancel the preview.

**6-13 OPTION**

Press **OPTION**. The **[OPTION setting screen]** appears.

The selecting items in the “**OPTION**” are as follows.

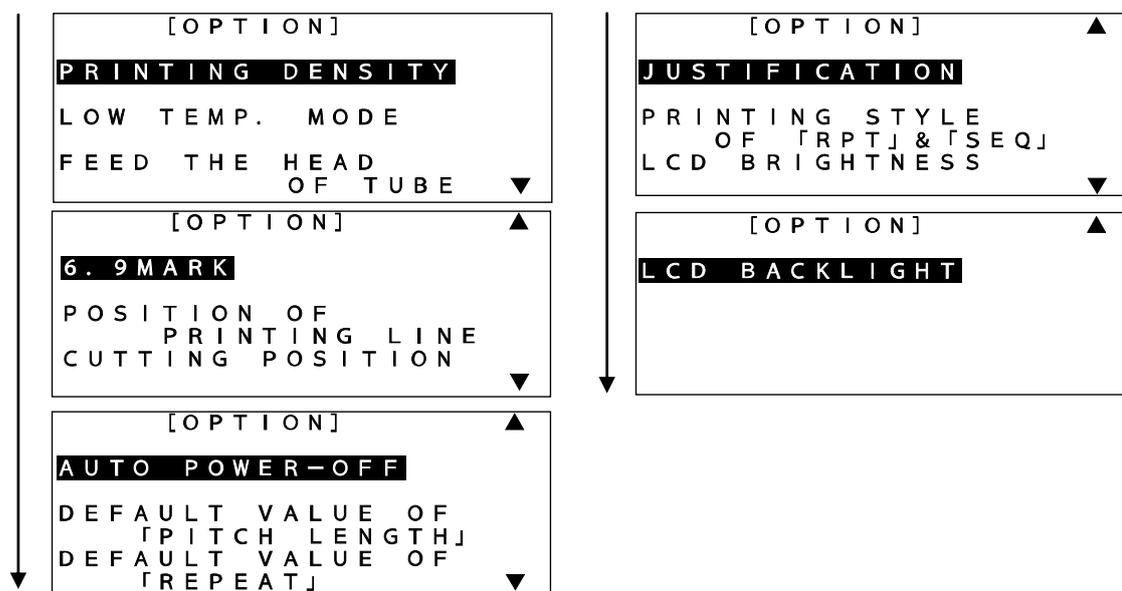

Press ◀/▶ key to proceed to select the item to configure, then press **ENTER** while the cursor is positioned at the desired item.


**Note:** Press **ESC** key to cancel changes.

**6-13-1 PRINTING DENSITY**

Adjusting the “**PRINTING DENSITY.**”


When you need to print darker or clearer, adjust it to higher level. When the ink ribbon adhered to the TUBE or TAPE, adjust it to lower level.

By pressing ◀/▶ key, increase or decrease the density level. Press  to register the density level.

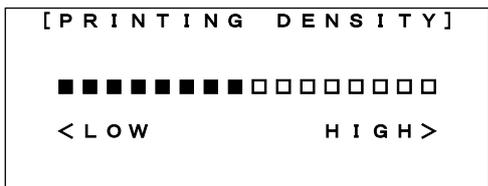

**6-13-2 LOW TEMP. MODE**

Under low temperature, the printing result might not as good as under normal temperature. In such a case, besides adjusting the “**PRINTING DENSITY**”, the printing result might be improved slightly by activating “**LOW TEMP. MODE**”.

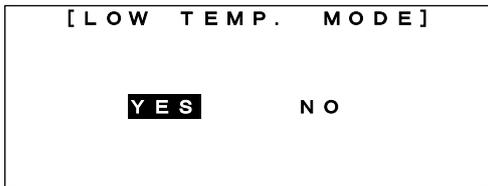

LOW TEMP. MODE	PRINTING SPEED
YES	About 10mm/s
NO	About 27.5mm/s

**Note:** When this function activates, printing speed is changed as the above table.

**6-13-3 FEED THE HEAD OF TUBE**

Setting the “**FEED THE HEAD OF TUBE**”.

After selecting the item by pressing ◀/▶ key, press  to register the setting.



**Note:**


- This function is activated only for printing on tube.
- When “**YES**” is selected, the head of tube (approx.55mm) is fed without printing before the first block.

**6-13-4 “6, 9” MARK**

Setting the printing style of 6 and 9 for a document.

After selecting the item by pressing ▲/▼ key, press  to register the setting.

Selectable items: (6 9), (6\_ 9\_), (6. 9.)

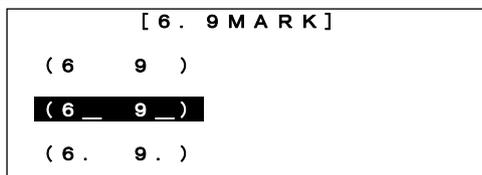



**Note:** • When “(6\_ 9\_)” is selected, the printing style is like 6 and 9.

**6-13-5 POSITION OF PRINTING LINE**

Adjusting the “POSITION OF PRINTING LINE.”

By pressing ◀/▶ key, changing the vertical position of printing line.

Increment : higher. Decrement : lower. Press  to register the setting.

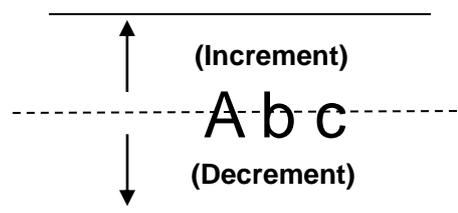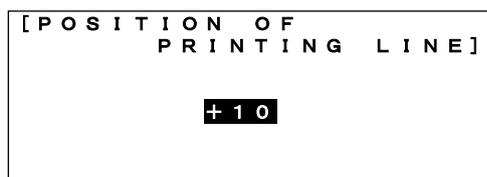**6-13-6 CUTTING POSITION**


Adjusting the “CUTTING POSITION.”

By pressing ◀/▶ key, changing the cutting position.

Increment : margin at right side getting bigger.

Decrement : margin at left side getting bigger. Press  to register the setting.


Setting range: -2.0~+2.0mm

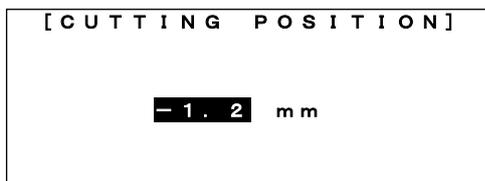

**6-13-7 AUTO POWER-OFF**

Setting the “**AUTO POWER- OFF**”.

After selecting the item by pressing ◀/▶ key, press **ENTER** to register the setting.

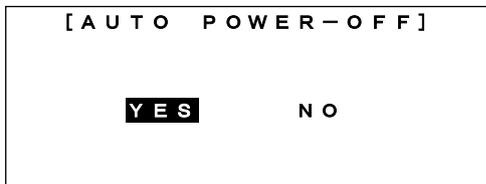


**Note:** When “**YES**” is selected, if no key is pressed for about 5 minutes, the machine turns off automatically.

**6-13-8 DEFAULT VALUE OF “PITCH LENGTH”**

Setting the default value of “**PITCH LENGTH.**”

**Note:** The default value is set initially as “**TUBE = 20mm and TAPE = 10mm**” at our factory.

After setting the desirable value by pressing ▲/▼/◀/▶ key or Ten key, press **ENTER** to register the setting.

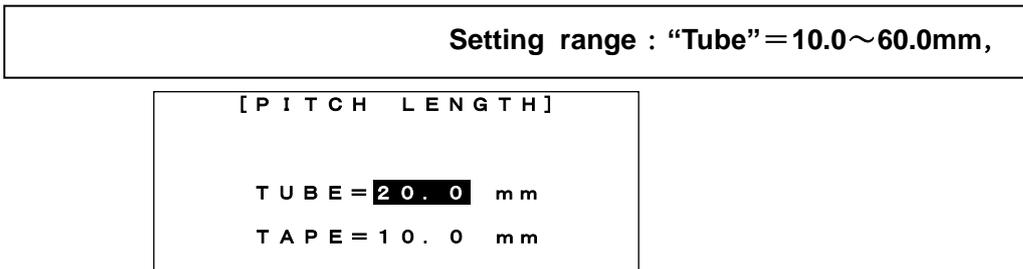


**Note :** If you press the **DELET**, the value is initialized to the factory default value.

**6-13-9 DEFAULT VALUE OF “REPEAT”**

Setting the default value of “**REPEAT.**”

**Note:** The default value is set initially as “**TUBE = 2pcs. and TAPE = 1pcs.**” at our factory.

After setting the desirable value by pressing ▲/▼/◀/▶ key or Ten key, press **ENTER** to register the setting.

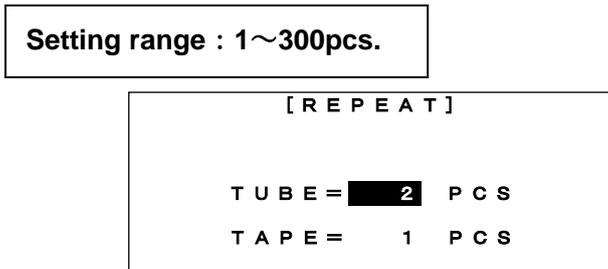

**Note :** If you press the **DELET**, the value is initialized to the factory default value.


### 6-13-10 JUSTIFICATION

Setting the “JUSTIFICATION” for a document in the [NORMAL PRINT MODE].

**Note:** • This setting is only applied to the [NORMAL PRINT MODE].

• The character arrangement in the [PITCH PRINT MODE] is always “CENTER.”

After selecting the item by pressing ▲/▼ key, press **ENTER** to register the setting.

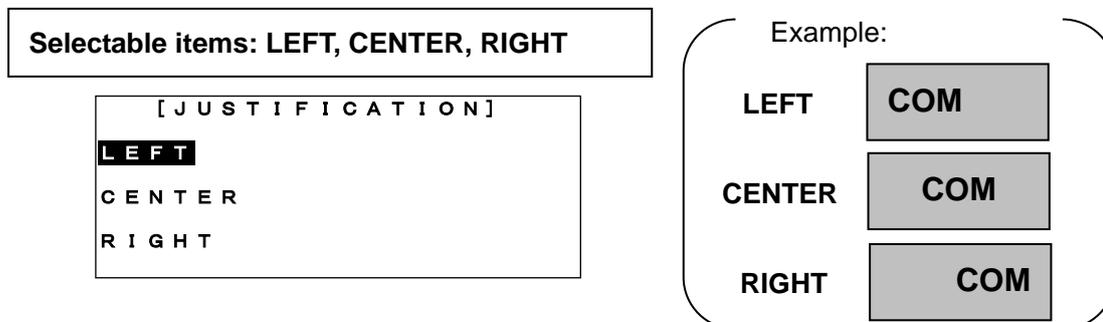


### 6-13-11 PRINTING STYLE OF “RPT” & “SEQ”

Selecting the printing style for the “REPEAT and SEQUENCE”.

The default value of the “PRINTING STYLE” is “A : 11, 22, 33” at our factory.

When you use the “REPEAT and SEQUENCE” function at the same time, you can select the printing style from “A : 11, 22, 33” or “B : 123, 123.”

Example: REPEAT :2 pcs. SEQUENCE : 01~03

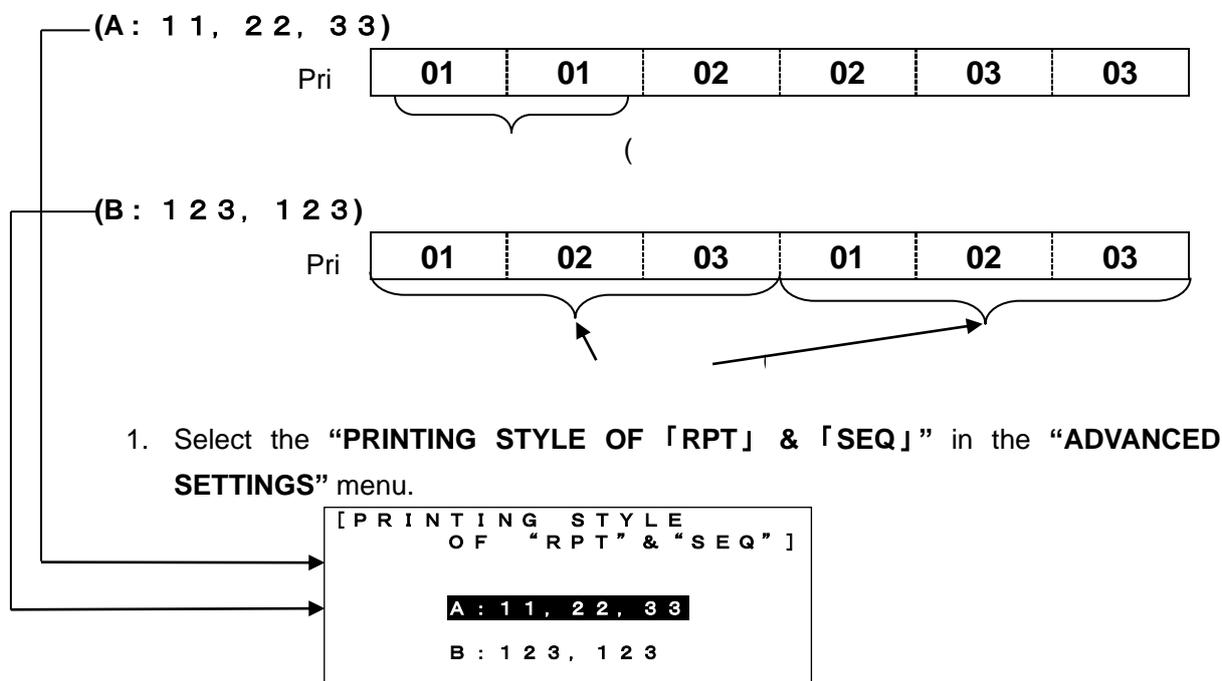

2. Press ▲/▼ to select the printing style.

**Note :** If you press the **DELET** key, the selection is initialized to the factory default.


3. Press **ENTER** key to register the new selection.

### 6-13-12 LCD BRIGHTNESS

Adjusting the “**LCD BRIGHTNESS.**” When the screen is not visible enough, adjust the “**LCD BRIGHTNESS**” level.

By pressing ◀/▶ key, increase or decrease the “**LCD BRIGHTNESS**” level.

Press  to register the “**LCD BRIGHTNESS**” level.

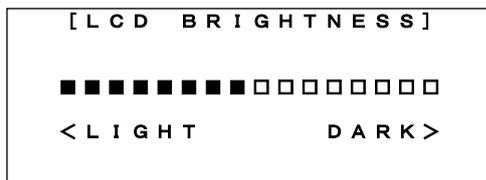

**Note:** • Without entering the **OPTION** menu, the adjustment of the “**LCD BRIGHTNESS**” is also available by following way.

1. Turn on the power.
2. In the [**PRINTED MATERIAL setting screen**],  
To increase the “**LCD BRIGHTNESS,**” press  key.  
To decrease the “**LCD BRIGHTNESS,**” press  key.


• Depending on the temperature, “**LCD BRIGHTNESS**” adjustment might improve the visibility of the screen.

### 6-13-13 LCD BACKLIGHT

Adjusting the “**LCD BACKLIGHT**” power level. To save the power consumption, or to optimize the screen visibility, adjust the “**LCD BACKLIGHT**” power level.

By pressing ◀/▶ key, select the “**LCD BACKLIGHT**” power level.

Press  to register the “**LCD BACKLIGHT**” power level.

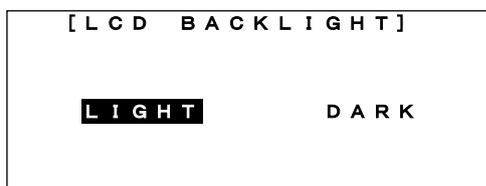


## 6-14 COPY / PASTE

Copying a block in the document and pasting it to the cursor position.


The setting value (size, character width, repeat and sequential number) of a block can also be copied and pasted.

### 6-14-1 COPY

1. Press ◀/▶ key, move the cursor under the block you want to copy.

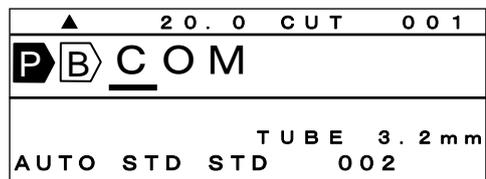


2. Press **SHIFT** → **MEMORY** (COPY).

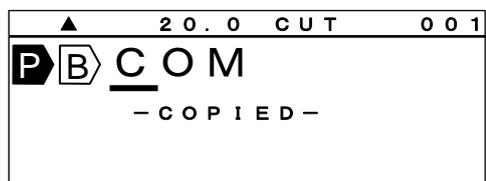


### 6-14-2 PASTE

1. Press ◀/▶ key, move the cursor under the block you want to paste.

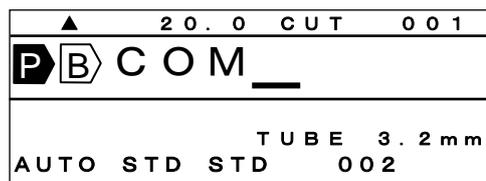

2. Press **SHIFT** → **IMAGE** (PASTE).

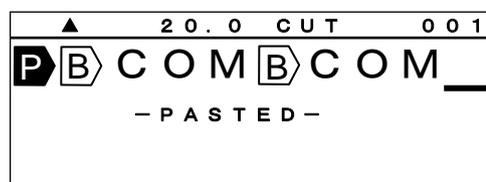

## 6-15 MEMORY


### 6-15-1 INTERNAL MEMORY

The created documents and their setting values can be saved in the internal memory.

The saving capacity is up to 50 files and up to 61,250 characters in total (depending on the file contents).

◀/▶, **B**, **P** and **N** can also be saved.

1. Press **MEMORY**. The **[MEMORY setting screen]** appears.

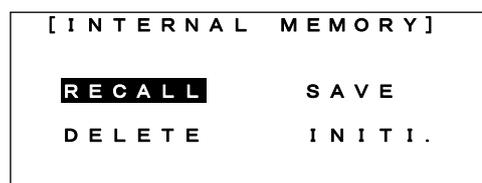

## 6. FUNCTIONS

---

2. Press ◀/▶/▲/▼ key to select a desired item and press **ENTER**.

**Selectable items: RECALL, SAVE, DELETE, INITIALIZE**

### [SAVE]

Saving the created document in the selected file No.

1. Select **SAVE**. And then press **ENTER**.

The **[FILE NO. selection screen]** appears.

```
[ S A V E ]
FILE NO. = 1
· T U B E
FILE NAME
```

**Note:** -If any document is not saved in the selected file No., “**NO FILE**” appears.

2. Press ◀/▶ key or Ten key to select the file No that  
“NO FILE” is displayed..

**Setting range: 1~50**

```
[ S A V E ]
FILE NO. = 2
- N O F I L E -
```

3. Press **ENTER** to save the selected document in  
the selected file No.

4. Enter a file name, and press **ENTER**.

### [RECALL]

Recalling the saved document.

1. Select **RECALL**. And then press **ENTER**.

The **[FILE NO. selection screen]** appears.

```
[ R E C A L L ]
FILE NO. = 1
· T U B E
```

2. Press ◀/▶ key or Ten key to select the desired file No. Press **ENTER** to recall the file.


**Note:** • If a document is existing in the **[INPUT screen]**, the message which asks overwriting appears.

**[DELETE]**

Deleting the saved document

1. Select **[DELETE]**. And then press **[ENTER]**.

The **[FILE NO. inputting screen]** appears.

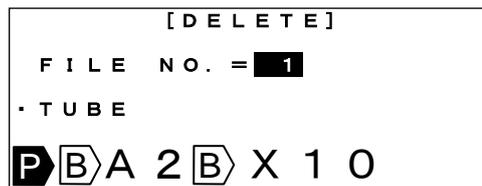

2. Press ◀/▶ key or Ten key to select the desired file No. Press **[ENTER]** to delete the file.

**[INITIALIZE]**

Deleting all of the file in the internal memory.

1. Select **[INITIALIZE]**. And then press **[ENTER]**.



2. After selecting "YES" by pressing ◀/▶ key, press **[ENTER]** to initialize.

## 7. PRINTING

Printing the created document.

### 7-1 PRINT RANGE SETTING SCREEN

Not only prints all the blocks, a certain range of blocks can be printed as well.

1. Press . [PRINTING RANGE setting screen] appears.

**Setting value: COPIES: 1~30**  
**START NO. = The first block to be printed**  
**END NO. = The last block to be printed.**

```
[ P R I N T ]
      C O P I E S =  1
S T A R T  N O . =  1
      E N D   N O . =  3
```

(The function of “COPIES”)

LM-550E can print multiple copies of the created document.

If “2” is entered in “COPIES”, the machine prints 2 sets of the same document automatically.

2. Press ◀/▶ key or Ten key to input the desired number as the “COPIES”, “START NO” and the “END NO.”
3. Press  after inputting the “END NO.” Then [PRINTING LENGTH ALIGNMENT screen] appears.

### 7-2 PRINTING LENGTH ALIGNMENT

Adjusting the total printing length.

The total printing length of tubes or tapes can be adjusted.

**Setting range: -30 to +30mm**  
**Default value:**

1. [PRINTING LENGTH ALIGNMENT screen] appears.

The upper field automatically displays the total calculated length to be printed.

The lower field displays the value to adjust.

```
[ P R I N T   L E N G T H ]
      2 3 0 . 0 m m
A L I G N M E N T =  0 m m
```

2. Press ◀/▶ key to decrease or increase the alignment value.

If +8mm is input as the alignment value, 8mm is added to the total calculated printing length.

3. Press  to start to print.

```
[ P R I N T   L E N G T H ]
      2 3 0 . 0 m m
A L I G N M E N T =  + 8 m m
```

### 7-3 CONTINUE PRINTING AFTER THE CONSUMABLES RUNNING OUT

When the consumables, such as TUBE and/or INK RIBBON, run out during printing, it is possible to continue printing after replacing them with new ones.

1. During the printing, when the consumables, such as TUBE and/or INK RIBBON run out, the following message appears on the screen.

```
UNPRINTED BLOCKS
REMAINING
CONTINUE PRINTING?
  YES      NO
```

2. Replace the used consumable with new one.
3. Press  to continue printing.

**Note:** When continue printing, the one last printed block might be printed again, to prevent incompletely printed block.

## 8. TROUBLE SHOOTING

## 8-1 ERROR MESSAGE LIST

Error message	Contents	Countermeasure
<b>OVER INPUT CHARACTER NO.</b>	Number of characters input has exceeded 1,225 characters/file.	Characters more than 1,225/file cannot be input.
<b>OVER INPUT LINE NO.</b>	Number of lines of the document to be input has exceeded 4 lines.	The maximum lines are 4 lines. Delete the texts in the excess line.
<b>OVER INPUT BLOCK NO.</b>	Number of blocks of the document has exceeded 200 blocks/file.	Blocks more than 200/file cannot be input.
<b>UNUSUAL POSITION</b>	The cursor position is not correct.	Move the cursor to the normal position.
<b>UP TO 1PC. IN EACH BLOCK</b>	Attempted to set 2 sequential numbers in one block.	Only one sequential number can be set in one block.
<b>UP TO 15PCS IN 1 FILE</b>	Attempted to set more than 16 sequential numbers per file in <b>[PITCH PRINT MODE]</b> .	In <b>[PITCH PRINT MODE]</b> , only up to 15 sequential numbers can be set in a file.
<b>OVER [N] NO.</b>	Attempted to set more than 16 sequential numbers were in <b>[PITCH PRINT MODE]</b> .	In <b>[PITCH PRINT MODE]</b> , only up to 15 sequential numbers can be set in a file.
<b>SET ONLY ONE [N]</b>	Attempted to set more than 2 sequential numbers per file in <b>[NORMAL PRINT MODE]</b> .	In <b>[NORMAL PRINT MODE]</b> , only one sequential number can be set in a file.
<b>DELETE OTHER [P] FIRST</b>	When there are several <b>[P]</b> marks, attempted to delete the first <b>[P]</b> .	Delete all the other <b>[P]</b> , then delete the first <b>[P]</b> .
<b>SET [P] IN THE FIRST BLOCK</b>	In the <b>[NORMAL PRINT MODE]</b> , attempted to input <b>[P]</b> mark in the middle of a document.	When changing from the <b>[NORMAL PRINT MODE]</b> to the <b>[PITCH PRINT MODE]</b> , move the cursor to the top of a document then input <b>[P]</b> .
<b>OVER [P] NO.</b>	Attempted to set 6th pitch length setting in a document.	Only 5 pitch length settings can be set in a document.
<b>P/LENGTH IS SAME AS LEFT [P]</b>	Input pitch length in the middle of a document, which is same value as previous pitch length.	If pitch length is same as the preceding pitch length, pitch length does not need to be newly set.
<b>NO COPIED DATA</b>	There are no data <b>"COPIED"</b> or <b>"PASTED."</b>	Implement the <b>"PASTE"</b> after <b>"COPY."</b> <b>Note:</b> If the power is turned off, the data copied is lost.
<b>OVER COPY CAPACITY</b>	Attempted to copy a block with more than 51 characters.	Copy the block which has only less than 50 characters.
<b>NO WORD IN THIS BLOCK</b>	Copy a block which has no text.	Copy a block which has some text.

Error message	Contents	Countermeasure
<b>NO ODD NUMBER WITHIN THE RANGE</b>	There are no odd numbers in the set serial numbers.	Reset the start and end values or select [ <b>ALL</b> ].
<b>NO EVEN NUMBER WITHIN THE RANGE</b>	There are no even numbers in the set serial numbers.	Reset the start and end values or select [ <b>ALL</b> ].
<b>INITIALIZE AFTER DELETE ALL FILES</b>	Attempted to initialize the setting without deleting/clearing the data in a document.	Implement the initialization of setting after deleting/clearing the data in the document.
<b>NO INPUT FILE</b>	Attempted to print without any text to be printed.	Implement the print after inputting the texts.
<b>OVER INPUT CHARACTER SIZE</b>	The input text to be printed is too big, compared to the size of the print material.	Reduce the number of lines, reduce the line space or change the character size to smaller size.
<b>OVER PRINTING SIZE</b>	The input text to be printed is too big, compared to the size of the print material.	Reduce the number of lines, reduce the line space or change the character size to smaller size.
<b>OVER PRINTING LENGTH</b>	The “ <b>PRINTING LENGTH</b> ” is too long.	Reduce the character space, character width, margin, number of characters or change the character size to smaller size. Or change the print length to longer length.
<b>OVER PITCH LENGTH</b>	The input text is too long for the set “ <b>PITCH LENGTH</b> ”.	Change “ <b>PITCH LENGTH</b> ”. Or reduce the character space, character width, number of characters or change the character size to smaller size.
<b>OVER TOTAL PRINT LENGTH</b>	The total print length is too long. Tube: maximum 20m Tape: maximum 5m	Reduce the “ <b>PRINTING LENGTH</b> ”, such by dividing the file to two files, or dividing the print range using the print range setting.
<b>OVER THE NUMBER OF COPIES</b>	The total print length is too long, when printing multiple copies. Tube: maximum 100m Tape: maximum 7m	Reduce the number of copies.
<b>NO PRINTED MATERIAL</b>	The consumable has not been set.	Set the print material.
<b>NO INK RIBBON</b>	Ink ribbon runs out. Ink ribbon feed is abnormal.	Replace the ink ribbon or take out the consumables, then set them again. Then continue printing.
<b>COVER IS OPENED</b>	The cover is open while printing.	Printing is not possible when the cover is open. Close it.
<b>THERMAL HEAD IS UNUSUAL</b>	Cannot perform printing because the temperature of the printer head has increased.	After leaving it for a while, print again.

## 8. TROUBLE SHOOTING

---

Error message	Contents	Countermeasure
<b>ERROR IN HALF CUT OPERATION</b>	Cannot perform printing because the half cutter unit does not operate normally.	Feed the printed material or replace the half cutter unit.

## 8-2 TROUBLESHOOTING

Problem	Countermeasure
1. The power is on but: <ol style="list-style-type: none"> <li>1) The screen does not turn on.</li> <li>2) The screen is dark (or too light)</li> </ol>	<ul style="list-style-type: none"> <li>• Make sure that the plug and the power cord is securely connected to the wall socket, the adapter and the LM-550E.</li> <li>• The optimum screen brightness depends on the ambient temperature. Adjust it in OPTION menu.</li> </ul>
2. When printing on the tube: <ol style="list-style-type: none"> <li>1) Does not print.</li> <li>2) The printing is blur (weak).</li> <li>3) Prints sporadically.</li> <li>4) The printing is stained (too dense).</li> <li>5) The tube is shorter than the setting.</li> <li>6) The characters don't come to the center.</li> <li>7) The tube is jammed.</li> <li>8) The white horizontal line is on the printed characters.</li> </ol>	<ul style="list-style-type: none"> <li>• Make sure that the cassette cover has been securely closed.</li> <li>• Make sure that the tube has been set properly.</li> <li>• Make sure that the tube diameter is correct.</li> <li>• Make sure that the ink ribbon has been set properly.</li> <li>• Make sure that there is no dirt, stain, etc adhered to the tube.</li> <li>• Make sure that there is no dirt, stain, etc adhered to the thermal head.</li> <li>• If the ambient temperature becomes lower than 15°C or higher than 35°C, printing faults may occur.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Try adjusting “<b>PRINTING DENSITY</b>” in OPTION menu.</li> <li>• When under the low temperature, by making the printing speed the “<b>LOW TEMP. MODE (10.0mm/s)</b>,” the printing quality might be slightly improved.</li> </ul> <ul style="list-style-type: none"> <li>• Check that the tube is not tangled to the reel. Set the tube in a way that it can be taken out from tube reel with slight force (approx. 200g).</li> <li>• Check that the tube has not been set twisted.</li> <li>• Check that the feeding roller is clean.</li> <li>• Check that there is no waste of the tube caught in the exit.</li> <li>• Remove the jammed tube with using “<b>FEED</b>” function. Do not pull the tube by hand.</li> <li>• The printer head might be damaged. Contact your dealer.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Don't use the tube attached solid dirt or foreign material because it may cause trouble of printer head.</li> </ul>

## 8. TROUBLE SHOOTING

Problem	Countermeasure
<p>3. When printing on the tape:</p> <ol style="list-style-type: none"> <li>1) The tape cannot be set.</li> <li>2) Does not print.</li> <li>3) The printing is blur (weak).</li> <li>4) The printing is stained (too dense).</li> </ol> <ol style="list-style-type: none"> <li>5) The tape is shorter than the setting.</li> <li>6) The characters don't come to the center.</li> </ol>	<ul style="list-style-type: none"> <li>• Check the position of the M roller lever.</li> <li>• Make sure that the tape has been set properly.</li> <li>• Make sure that the setting value for the tape width is correct.</li> <li>• Make sure that the ink ribbon has been set properly.</li> <li>• Make sure that there is no dirt, stain, etc adhered to the tape.</li> <li>• If the ambient temperature becomes lower than 15°C or higher than 35°C, printing faults may occur.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Try adjusting “<b>PRINTING DENSITY</b>” in OPTION menu.</li> </ul> <ul style="list-style-type: none"> <li>• Check that the feeding roller is clean.</li> </ul> <ul style="list-style-type: none"> <li>• Check that there is no waste of the tape or tube caught in the exit.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Try adjusting “<b>CUTTING POSITION</b>” in OPTION menu.</li> </ul>
<p>4. Half cutting does not work.</p> <ol style="list-style-type: none"> <li>1) The tape is not cut.</li> <li>2) The cutting of the tube is shallow (cannot be cut off).</li> </ol>	<ul style="list-style-type: none"> <li>• Make sure that the half cutter has been set properly.</li> <li>• Make sure that the “Half cutting depth adjustment lever” is properly set. (TUBE position)</li> <li>• Check the cutter has been worn out or not. If the cutter has been used more than 5,000 cuttings, replace it with new one.</li> <li>• Make sure to use the exclusive half cutter LM-HC340 (yellow color).</li> <li>• Check that there is no waste of the tape or tube caught in the exit.</li> </ul>
<p>5. Manual cutting does not work.</p>	<ul style="list-style-type: none"> <li>• Check that there is no waste of the tape or tube caught in the exit.</li> <li>• Check the manual cutter has been worn out or not. If the manual cutter has been used more than 30,000 cuttings, ask your dealer for servicing.</li> </ul> <p><b>REQUEST</b></p> <ul style="list-style-type: none"> <li>• The manual cutter cannot be replaced by customers. Contact your dealer for service.</li> </ul>

- In case the problem is not solved with the above countermeasures, contact your dealer for service.

## 9. PRODUCT SPECIFICATIONS

ITEMS	CONTENTS
Dimensions	295(W) x 293 (D) x 94(H)mm
Weight	2.1Kg
Printing method	Thermal transfer method (300 dpi)
Display	LCD dot matrix: 64 x 160 pixel (Backlit)
Printing speed	27.5mm/s (Standard) 10.0mm/s (Low temperature mode)
Maximum printing length	Tube:20m, Tape: 5m Tube:100m, Tape: 7m (Multiple copies)
Maximum number of characters to input	1,225 characters per file
Character size	1.3, 2, 3, 4, 6mm height
Usable tube	Φ2.5 to 6.5 (PVC tube, Shrinkable tube)
Usable tape	Width 5, 9, 12mm (Max genuine tape)
Tube cutting method	Auto half cut, manual full cut
Internal memory	61,250 characters (1,225 characters x 50 files)
Power supply	DC12V, 3.0A • Use only specified AC Adapter(100V - 240V) included in the package.
Power consumption	15W (max.)
Operating environment	15 to 35°C

### 10. APPENDICES

#### NUMERAL

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳
'04	'05	'06	'07	'08	'09	'10	'11	'12	'13
'14	'15	'16	'17	'18	'19	'20	'21	'22	'23
'24	'25	'26	'27	'28	'29				
I	II	III	IV	V	VI	VII	VIII	IX	X
i	ii	iii	iv	v	vi	vii	viii	ix	x

#### ALPHABET IN CIRCLE

A	B	C	D	E	F	G	H	I	J
K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z				

#### UNIT

mm	cm	km	mm <sup>2</sup>	cm <sup>2</sup>	m <sup>2</sup>	km <sup>2</sup>	ha	mm <sup>3</sup>	cm <sup>3</sup>
m <sup>3</sup>	cc	mℓ	dℓ	ℓ	mg	kg	Å	°C	°K
caℓ	mV	kV	mA	ns	μs	ms	mW	kW	VA
Ω	kΩ	Pf	nF	μF	Hz	KHz	MHz	GHz	dB

#### OFFICE SYMBOL

No.	K.K.	TEL	FAX	(株)	(有)	(代)
-----	------	-----	-----	-----	-----	-----

#### SPERScript

0	1	2	3	4	5	6	7	8	9
-	+	(	)	a	b	c	x	y	z
α	β	γ							

#### SUBSCRIPT

0	1	2	3	4	5	6	7	8	9
-	+	(	)	a	b	c	x	y	z
α	β	γ							

#### ELECTRICAL INSTALLATION①

♂	♂	⊥	⊕	⊕	⊕	⊕	⊕	⊕	⊕
⊕	⊗	⊗	●	⊙	⊙	⊗	⊗	⊙	⊙
⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕

#### ELECTRICAL INSTALLATION②

⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕
⊕	⊕	⊕	⊕	⊕					

#### ELECTRICAL INSTALLATION③

⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕
⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕
⊕	⊕								

#### ITALIC

<i>a</i>	<i>b</i>	<i>c</i>	<i>d</i>	<i>e</i>	<i>f</i>	<i>g</i>	<i>h</i>	<i>i</i>	<i>j</i>
<i>k</i>	<i>l</i>	<i>m</i>	<i>n</i>	<i>o</i>	<i>p</i>	<i>q</i>	<i>r</i>	<i>s</i>	<i>t</i>
<i>u</i>	<i>v</i>	<i>w</i>	<i>x</i>	<i>y</i>	<i>z</i>				

#### GREEK

Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ
Λ	Μ	Ν	Ξ	Ο	Π	Ρ	Σ	Τ	Υ
Φ	Χ	Ψ	Ω	α	β	γ	δ	ε	ζ
η	θ	ι	κ	λ	μ	ν	ξ	ο	π
ρ	σ	τ	υ	φ	χ	ψ	ω		

#### RUSSIAN

<b>А</b>	<b>Б</b>	<b>В</b>	<b>Г</b>	<b>Д</b>	<b>Е</b>	<b>Ё</b>	<b>Ж</b>	<b>З</b>	<b>И</b>	<b>Й</b>	<b>К</b>	<b>Л</b>	<b>М</b>	<b>Н</b>
<b>О</b>	<b>П</b>	<b>Р</b>	<b>С</b>	<b>Т</b>	<b>У</b>	<b>Ф</b>	<b>Х</b>	<b>Ц</b>	<b>Ч</b>	<b>Ш</b>	<b>Щ</b>	<b>Ъ</b>	<b>Ы</b>	<b>Ь</b>
<b>Ю</b>	<b>Я</b>													
<b>а</b>	<b>б</b>	<b>в</b>	<b>г</b>	<b>д</b>	<b>е</b>	<b>ё</b>	<b>ж</b>	<b>з</b>	<b>и</b>	<b>й</b>	<b>к</b>	<b>л</b>	<b>м</b>	<b>н</b>
<b>о</b>	<b>п</b>	<b>р</b>	<b>с</b>	<b>т</b>	<b>у</b>	<b>ф</b>	<b>х</b>	<b>ц</b>	<b>ч</b>	<b>ш</b>	<b>щ</b>	<b>ъ</b>	<b>ы</b>	<b>ь</b>
<b>ю</b>	<b>я</b>													